

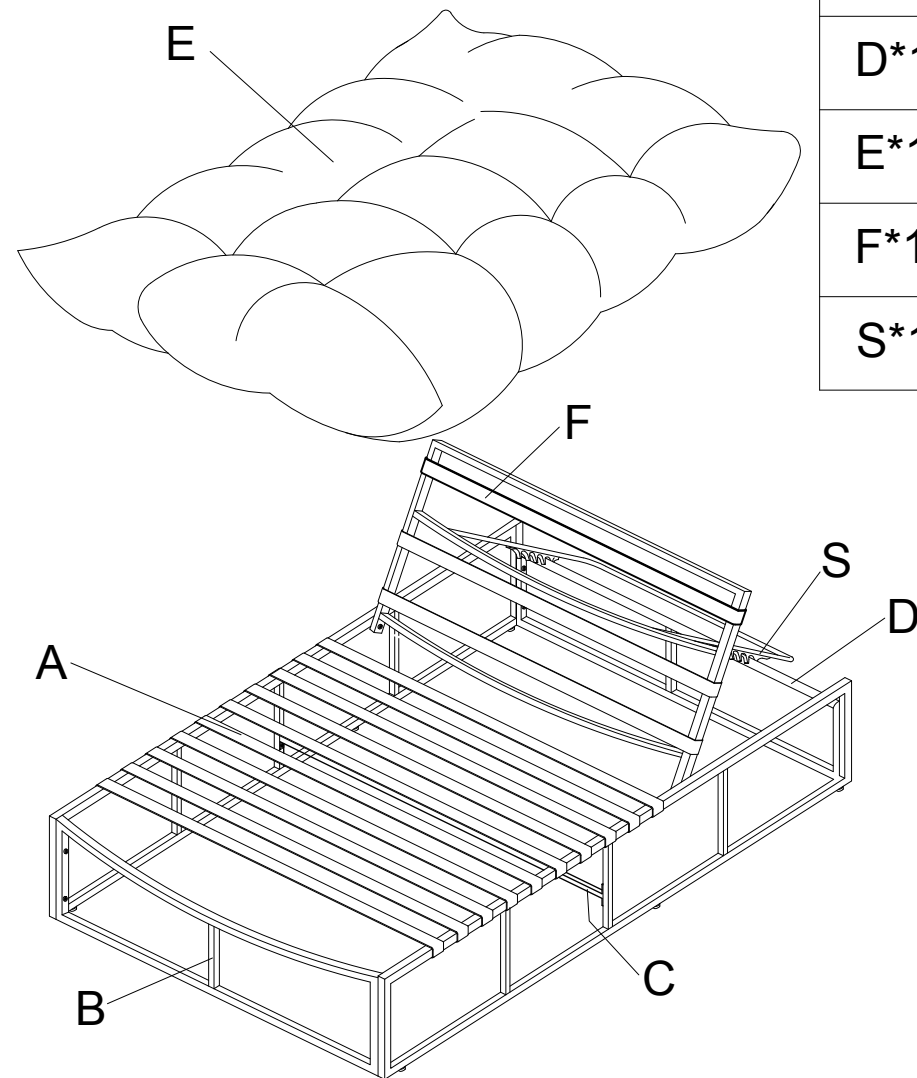
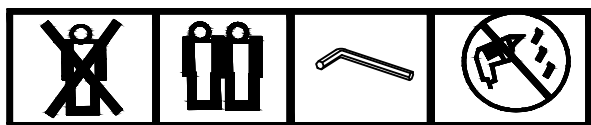
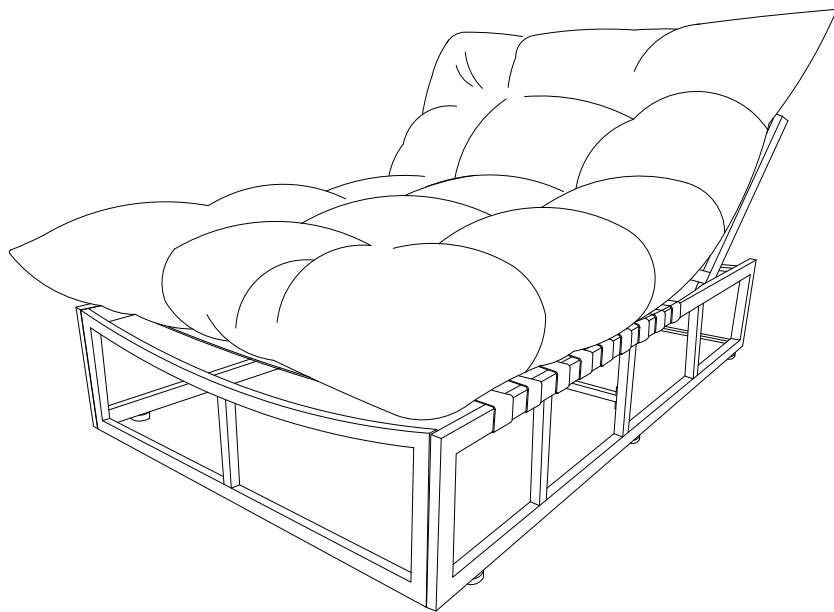












 **bonprix.** 923060



A*1
B*1
C*1
D*1
E*1
F*1
S*1

 M6*40 G x 4	 M6*35 H x 6(+1)	 M6*20 J x 2	 M6*15 K x 4	 L x 18(+2)	 M x 2	 N x 4	 P x 1	 Q x 1	 R x 1	 O x 6
---	---	---	---	--	--	--	--	--	--	--

Bitte ziehen Sie die Schrauben während der Montage noch nicht fest. Die Schrauben erst in ihrer Position fixieren und am Ende der Montage alle Schrauben festziehen.



W x 1


G x 4

L x 4


K x 4

L x 4

1

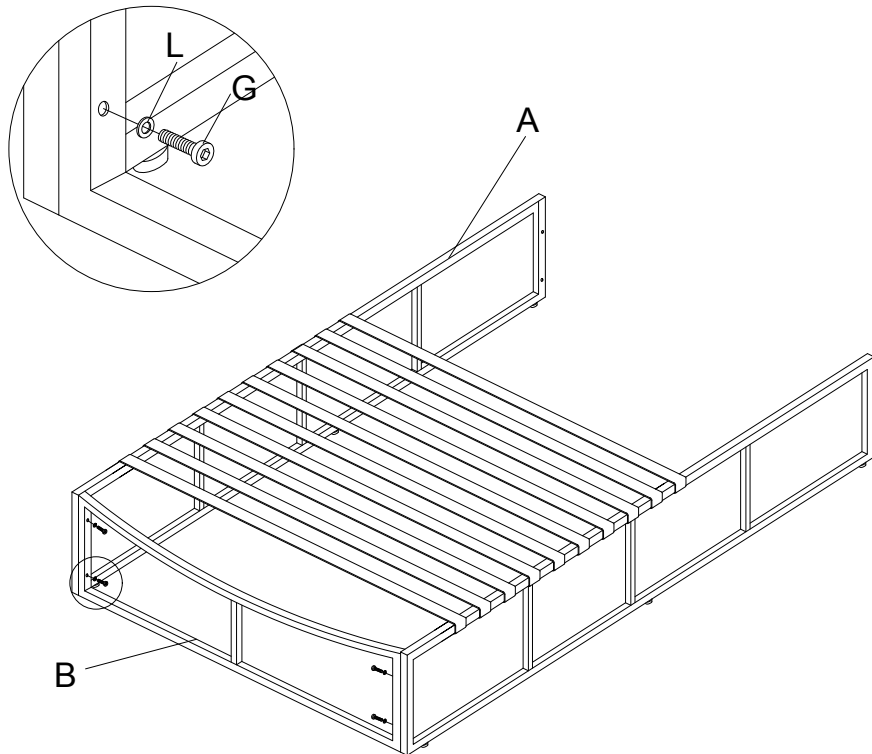

2

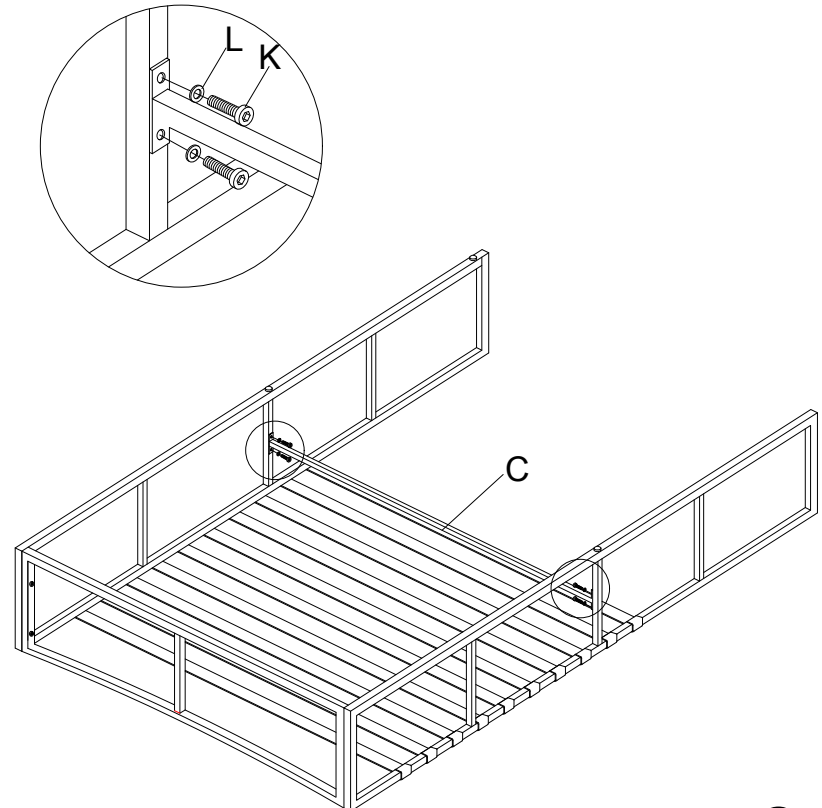

H x 4

L x 4

J x 2



L x 4

N x 2



M x 2

W x 1

3

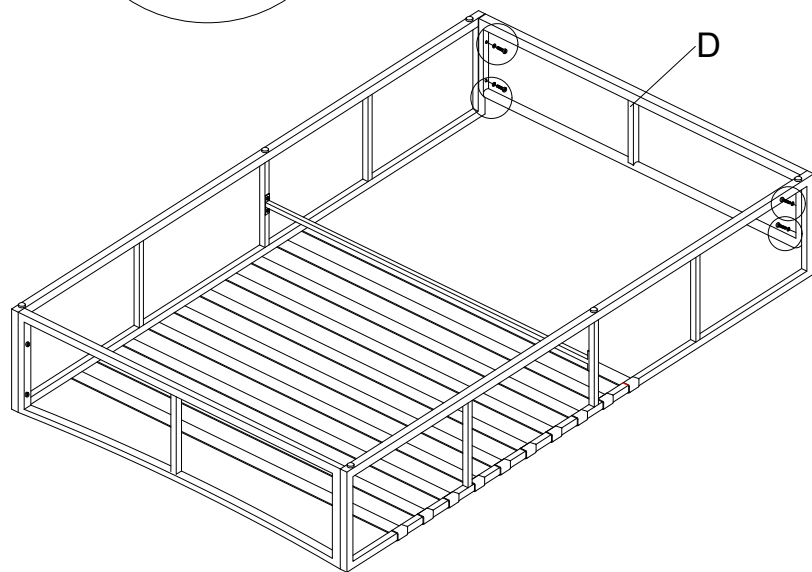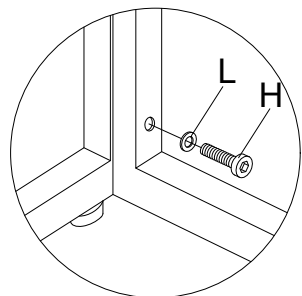

4

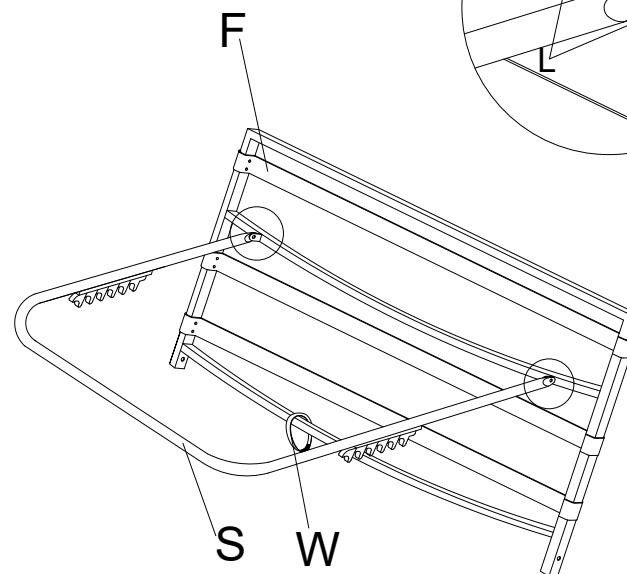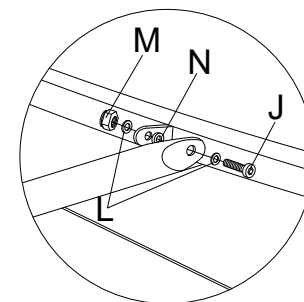



H x 2

L x 2




N x 2

O x 6


5

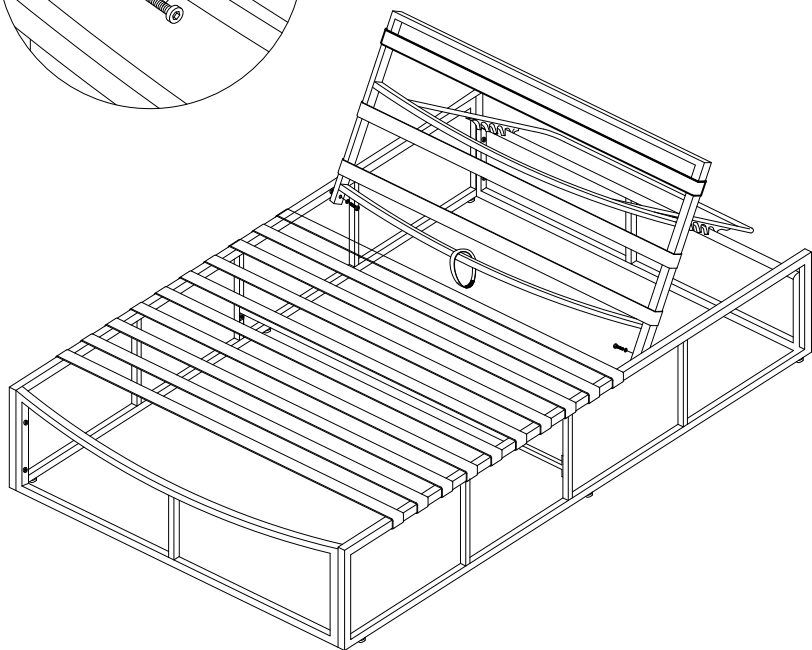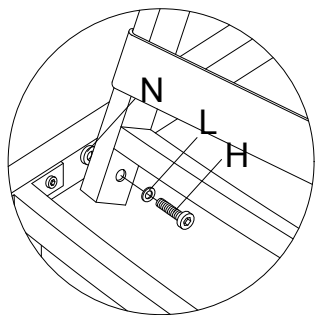

6

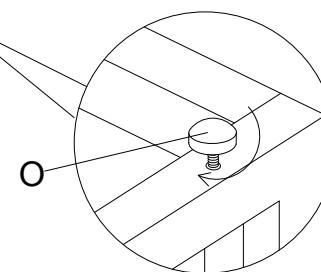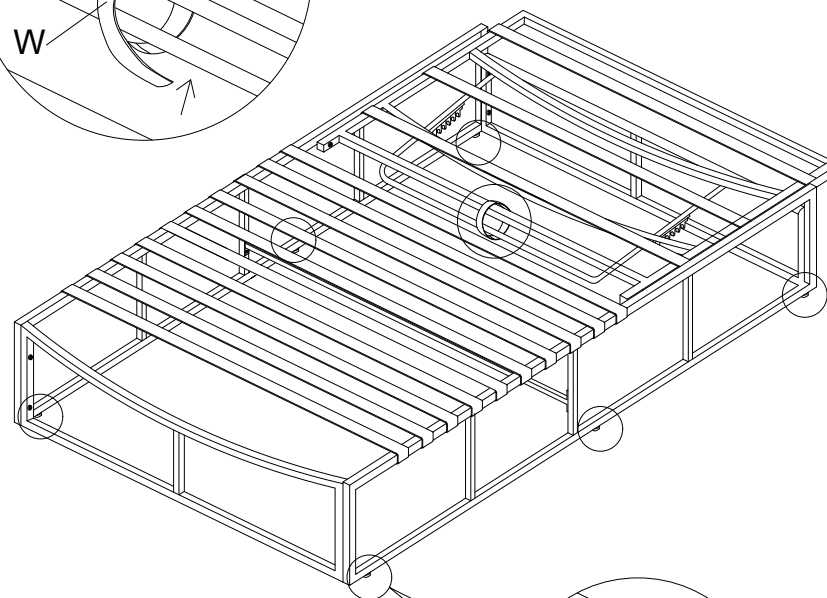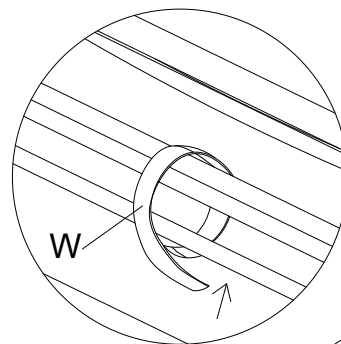

7

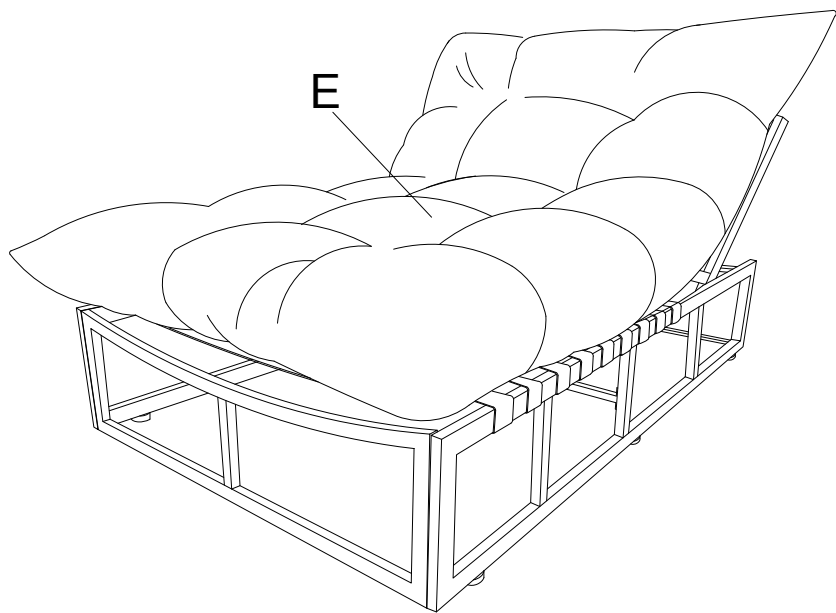

8

