




 bonprix. 939635

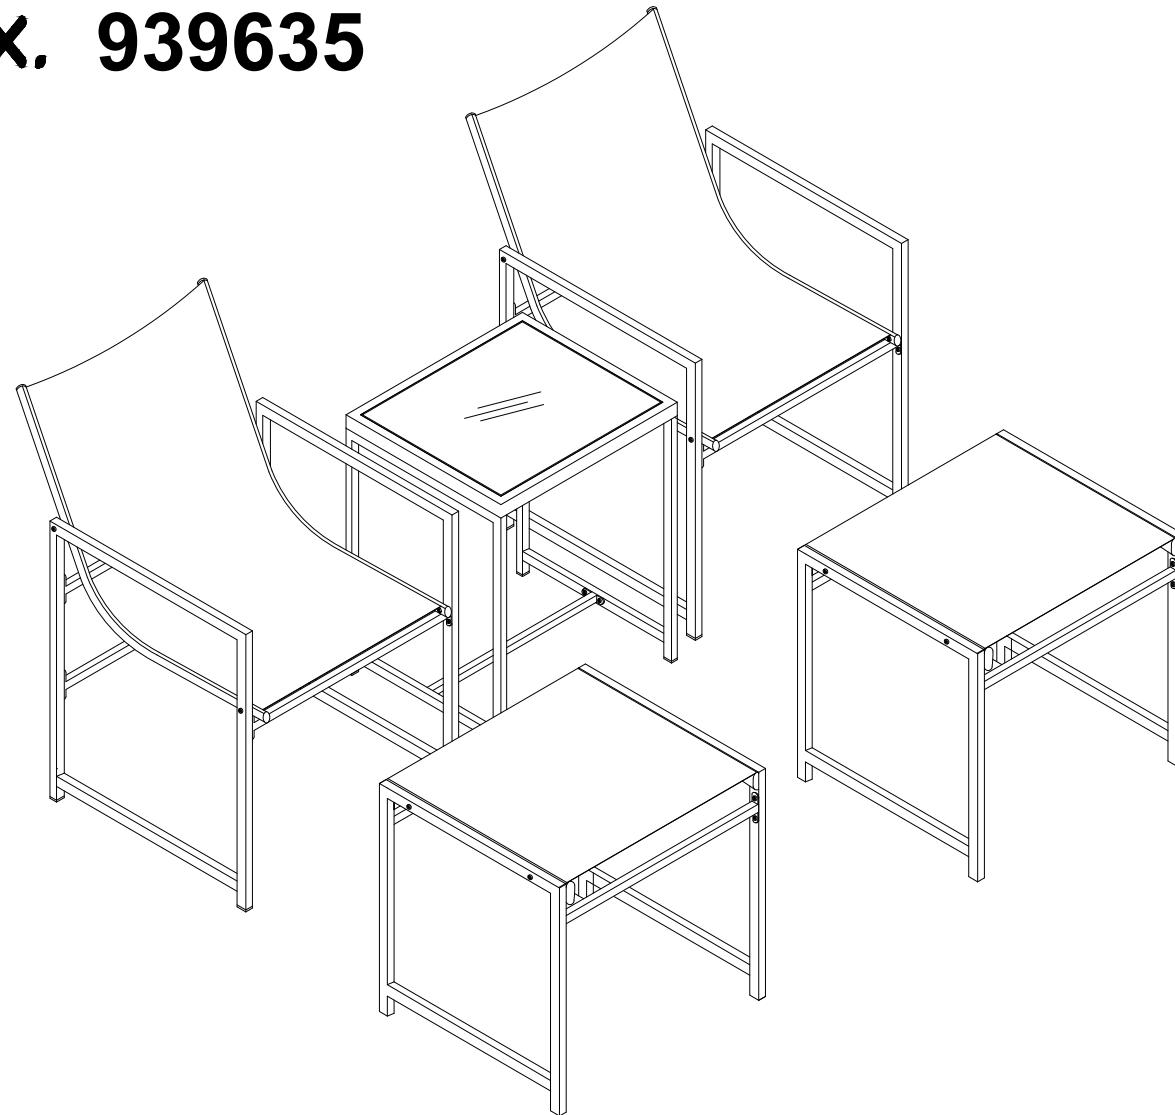


M6*50
Fx18




M6*30
Px 4



M6*15
Gx 44



N x18




Hx81




Sx4



Jx1





Yx1





Qx 1

 bonprix. 939635

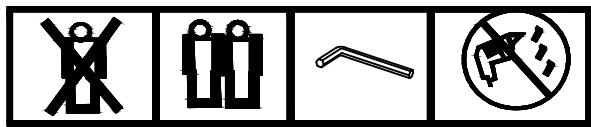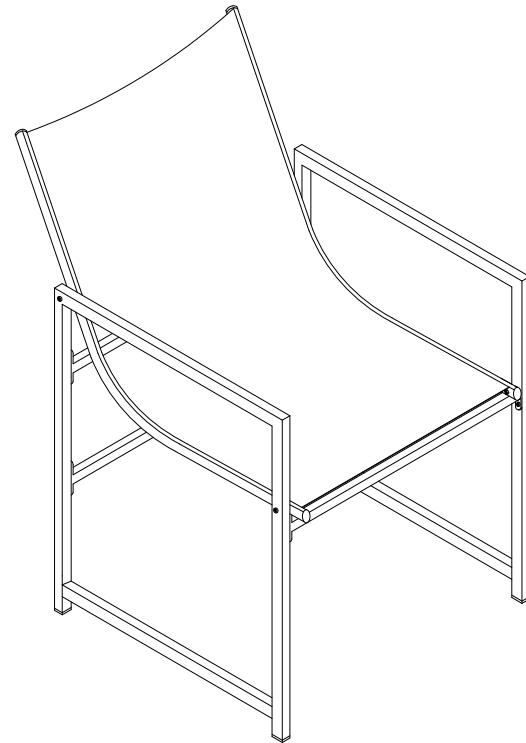


x 2

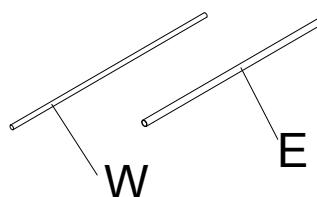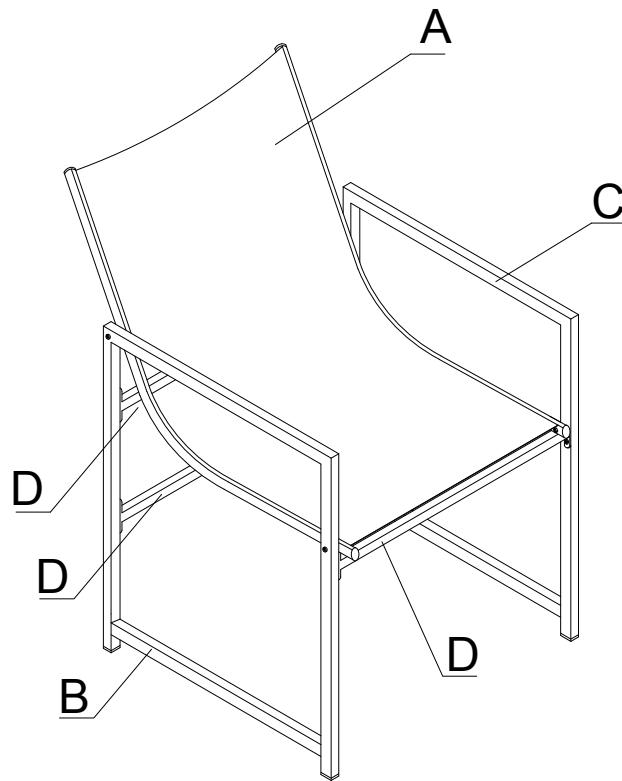

1 / 3


A*1
B*1
C*1
D*3
E*1

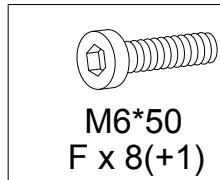

M6*50
F x 8(+1)




M6*15
G x20(+2)



N x 8(+1)




H x 36(+2)



S x 4



J x 1



Y x 1




Q x 1


Bitte ziehen Sie die Schrauben während der Montage noch nicht fest. Die Schrauben erst in ihrer Position fixieren und am Ende der Montage alle Schrauben festziehen.

G x 10 H x 10

1

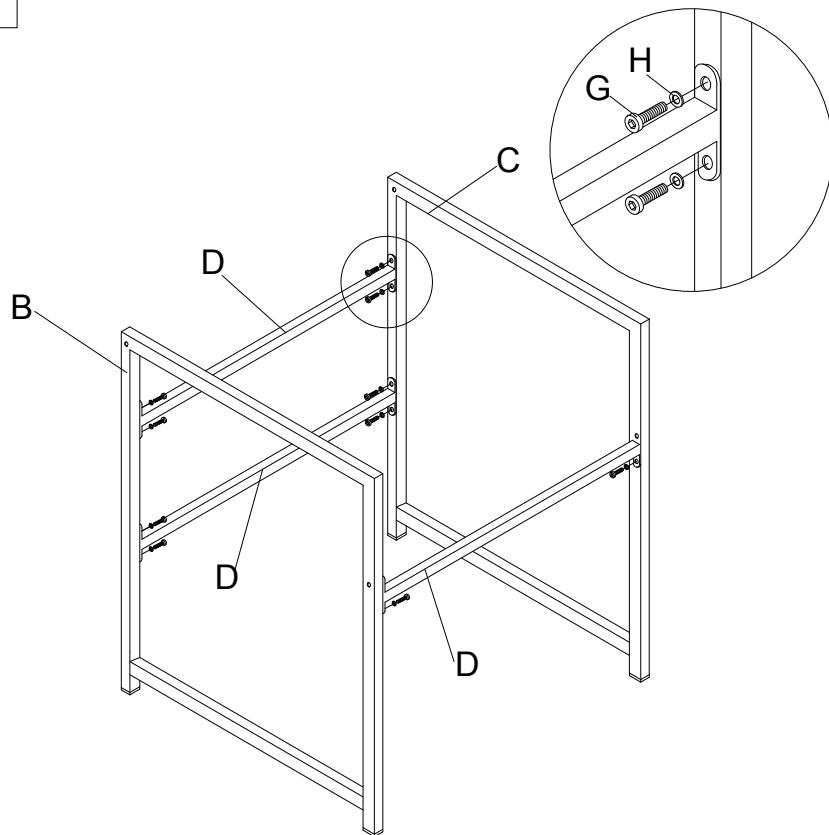

2

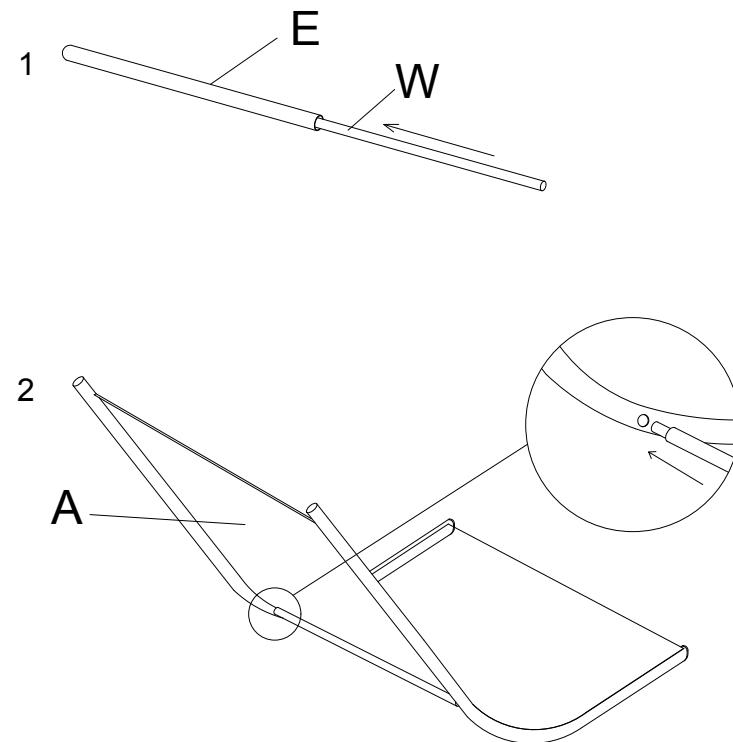

x 2

x 2

2 / 3


F x 4

H x 4

S x 2

N x 4


3

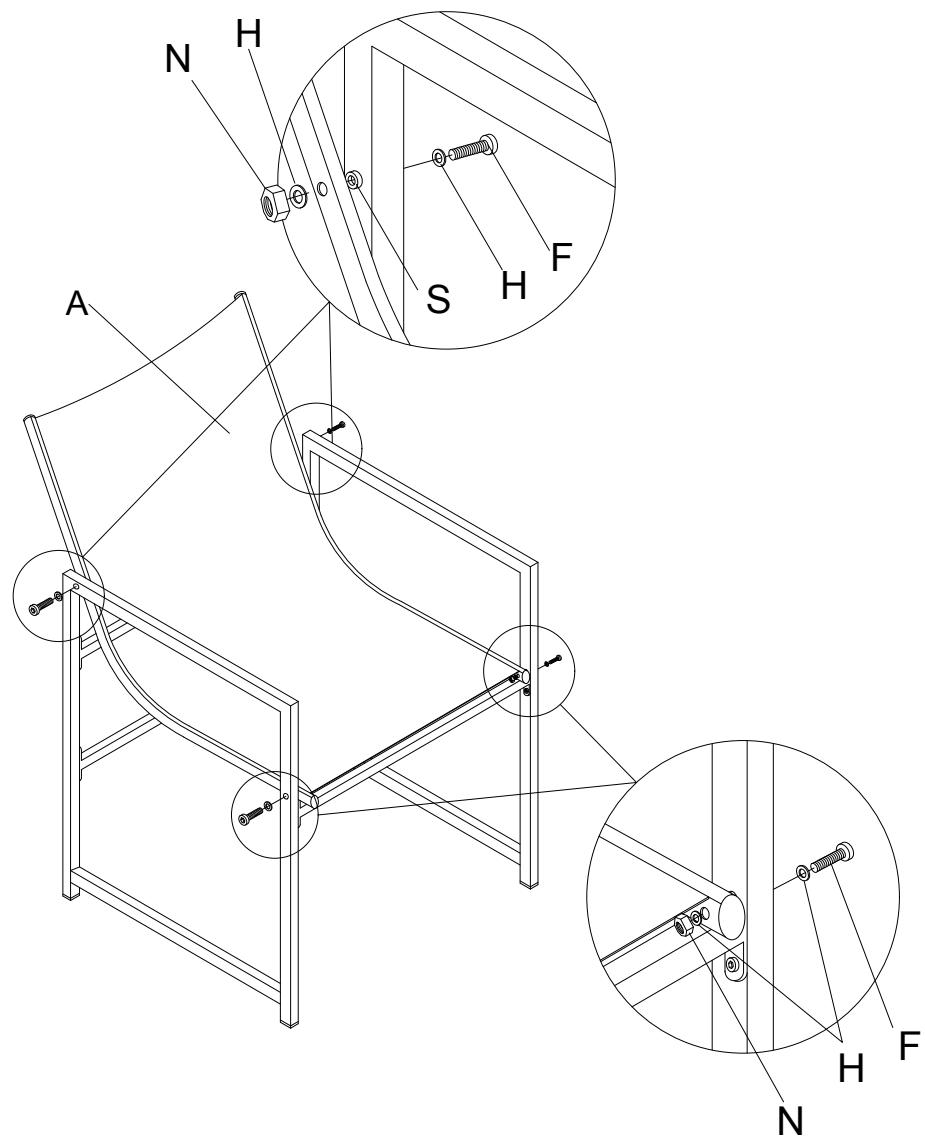

x 2




4

x 2

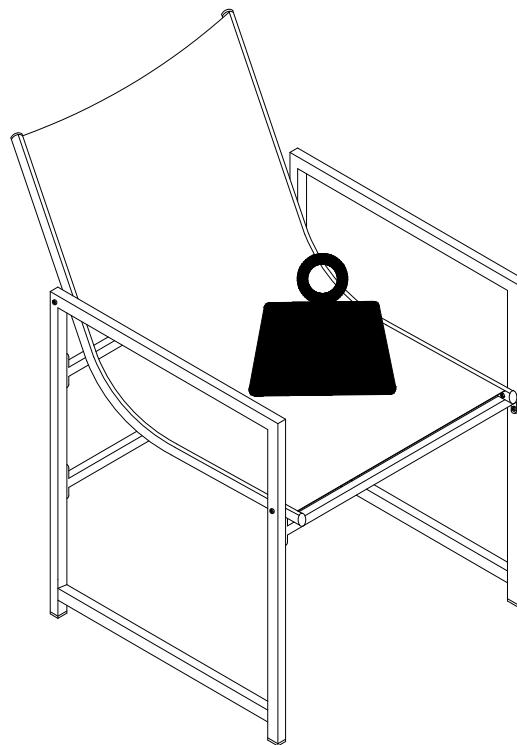


3 / 3

 bonprix. 939635

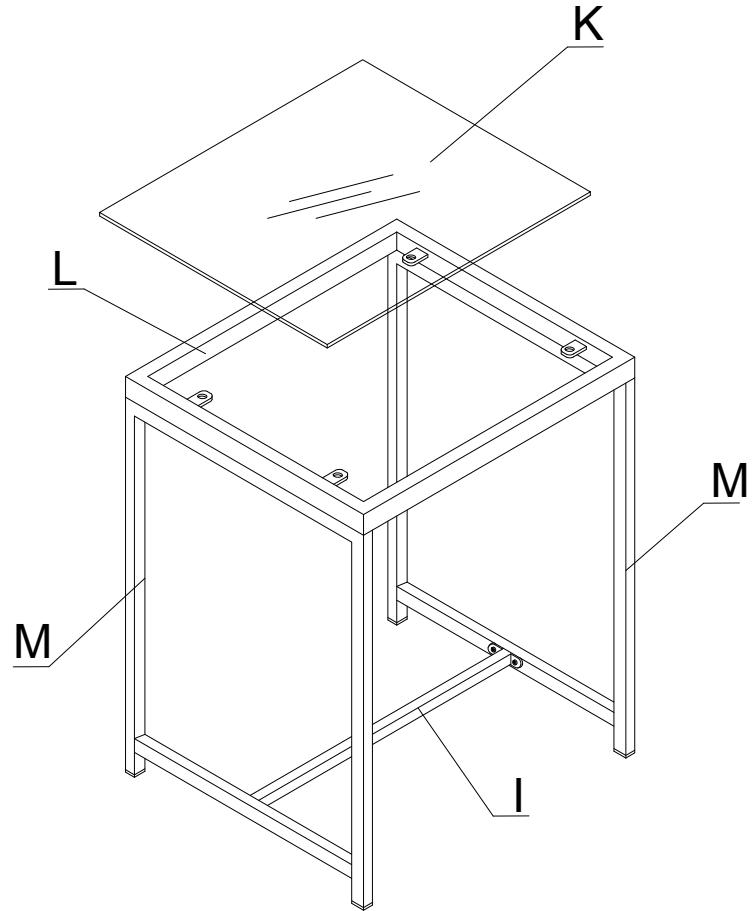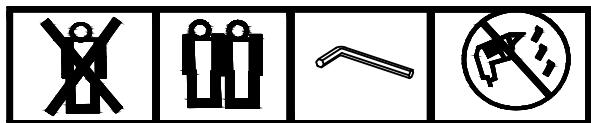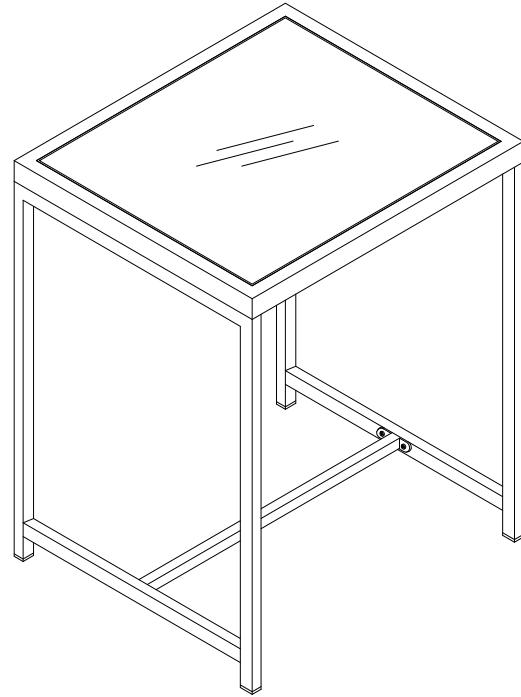

1 / 3


K*1
L*1
M*2
I*1



M6*30
P x 4




M6*15
G x 4



H x 8(+1)



J x 1



Y x 1

Bitte ziehen Sie die Schrauben w h rend der Montage noch nicht fest. Die Schrauben erst in ihrer Position fixieren und am Ende der Montage alle Schrauben festziehen.


P x 4

H x 4


G x 4

H x 4


1

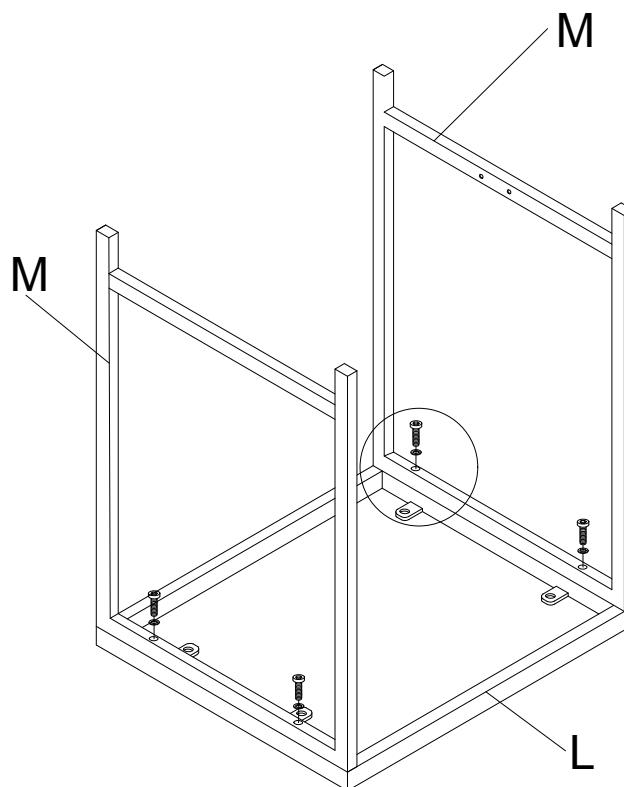



2

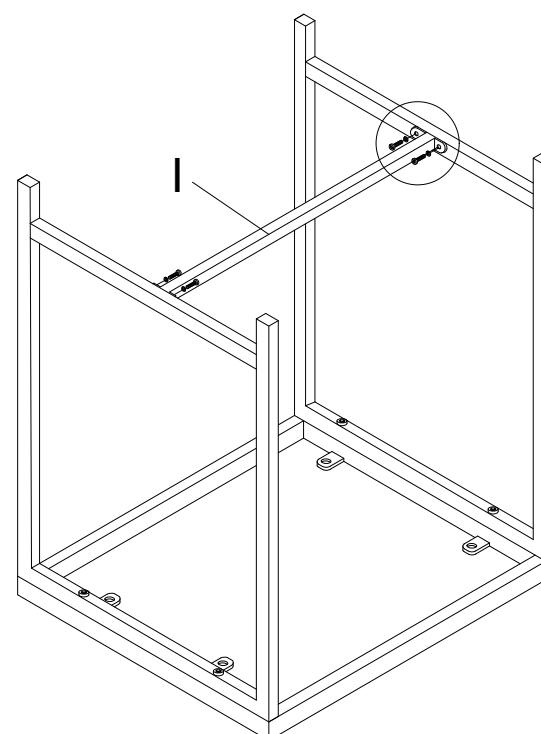


2 / 3

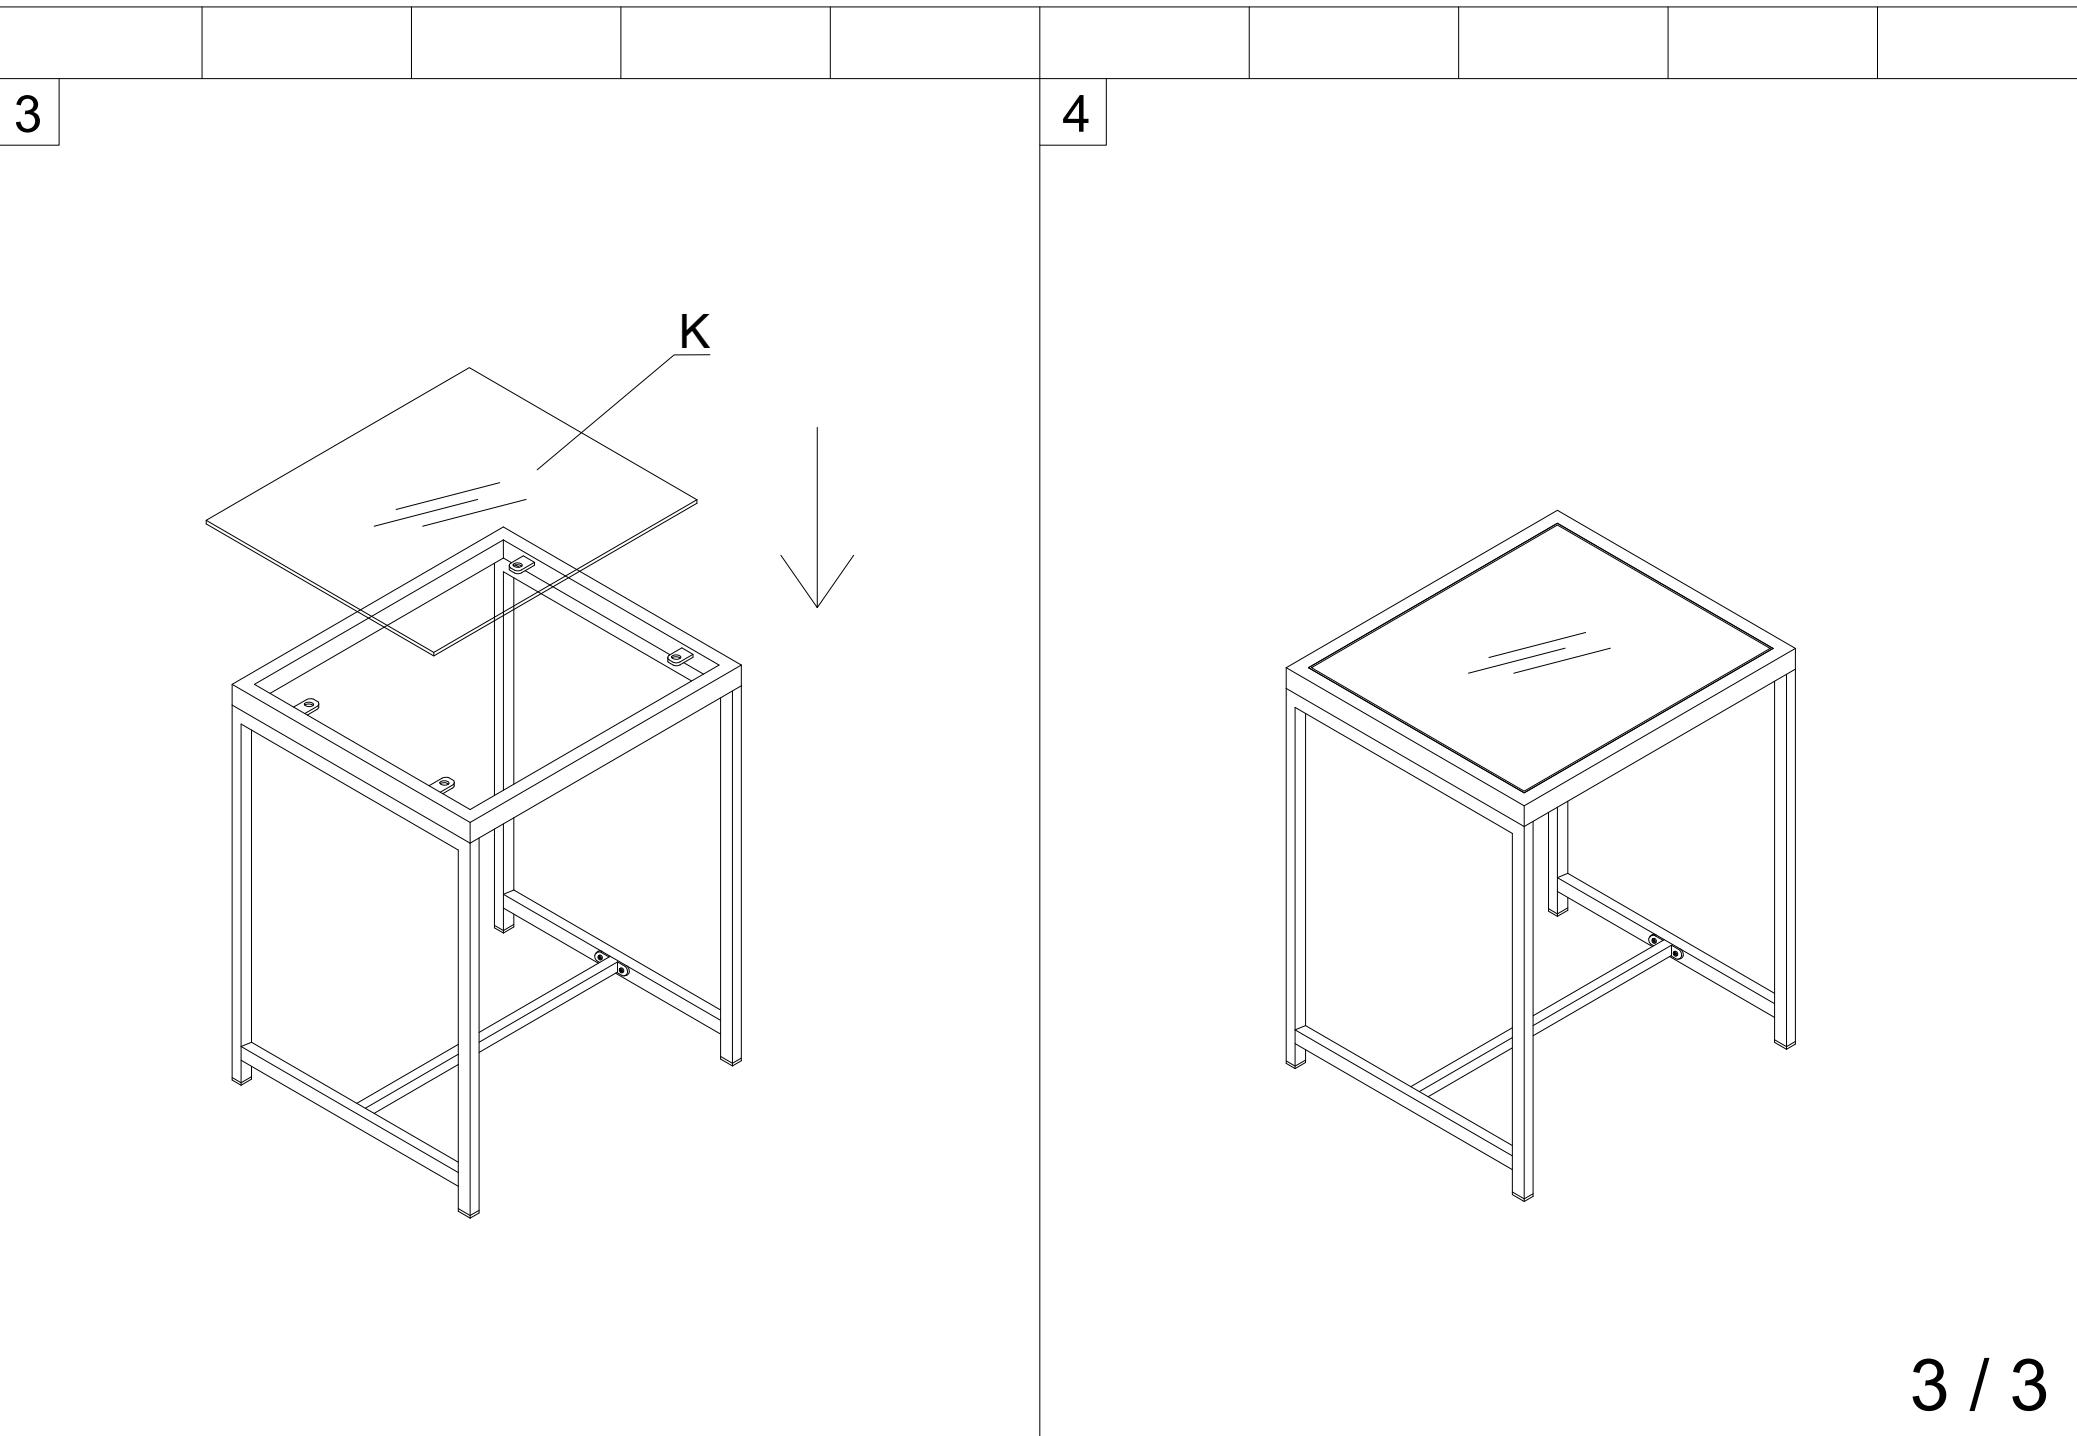

 bonprix. 939635






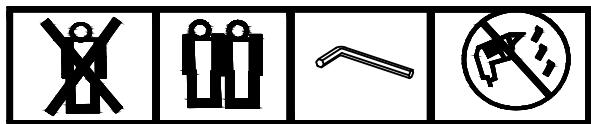
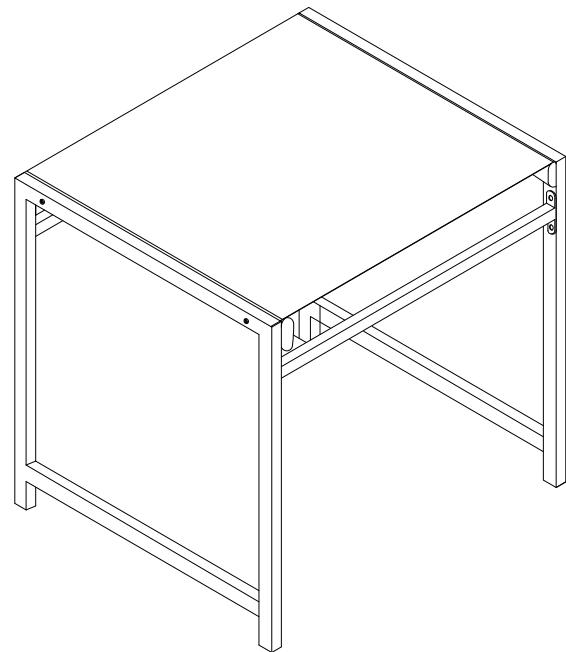


x 2

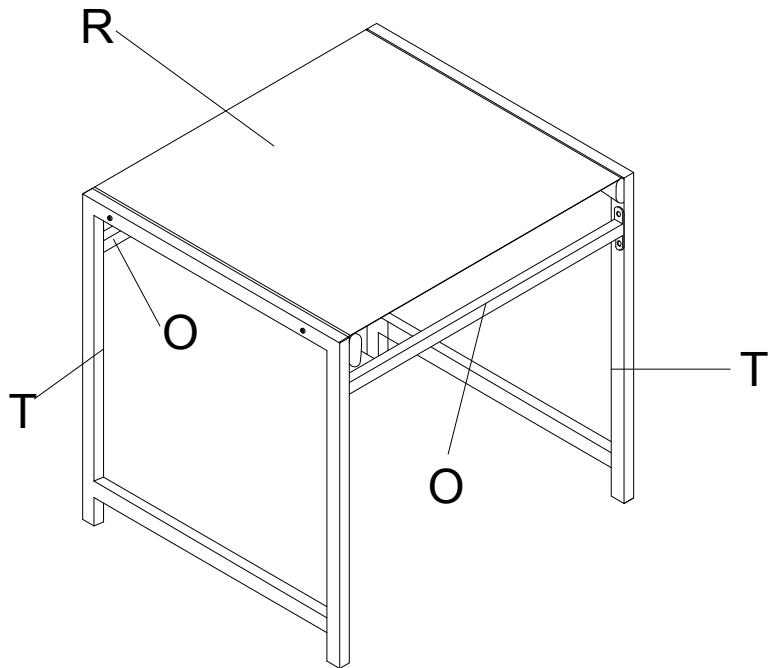



1 / 3

R*1
O*2
T*2

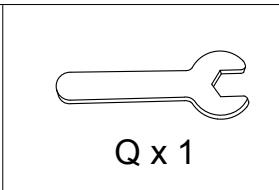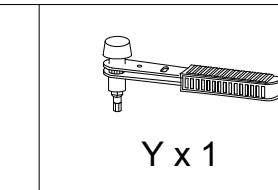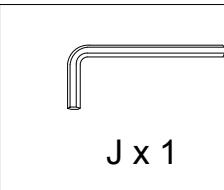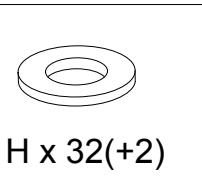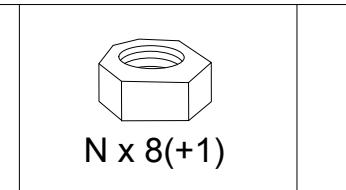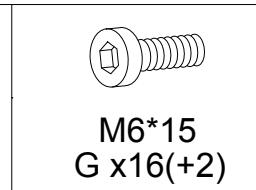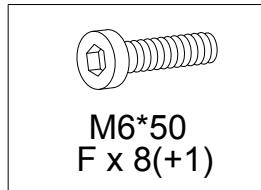

Bitte ziehen Sie die Schrauben w h rend der Montage noch nicht fest. Die Schrauben erst in ihrer Position fixieren und am Ende der Montage alle Schrauben festziehen.

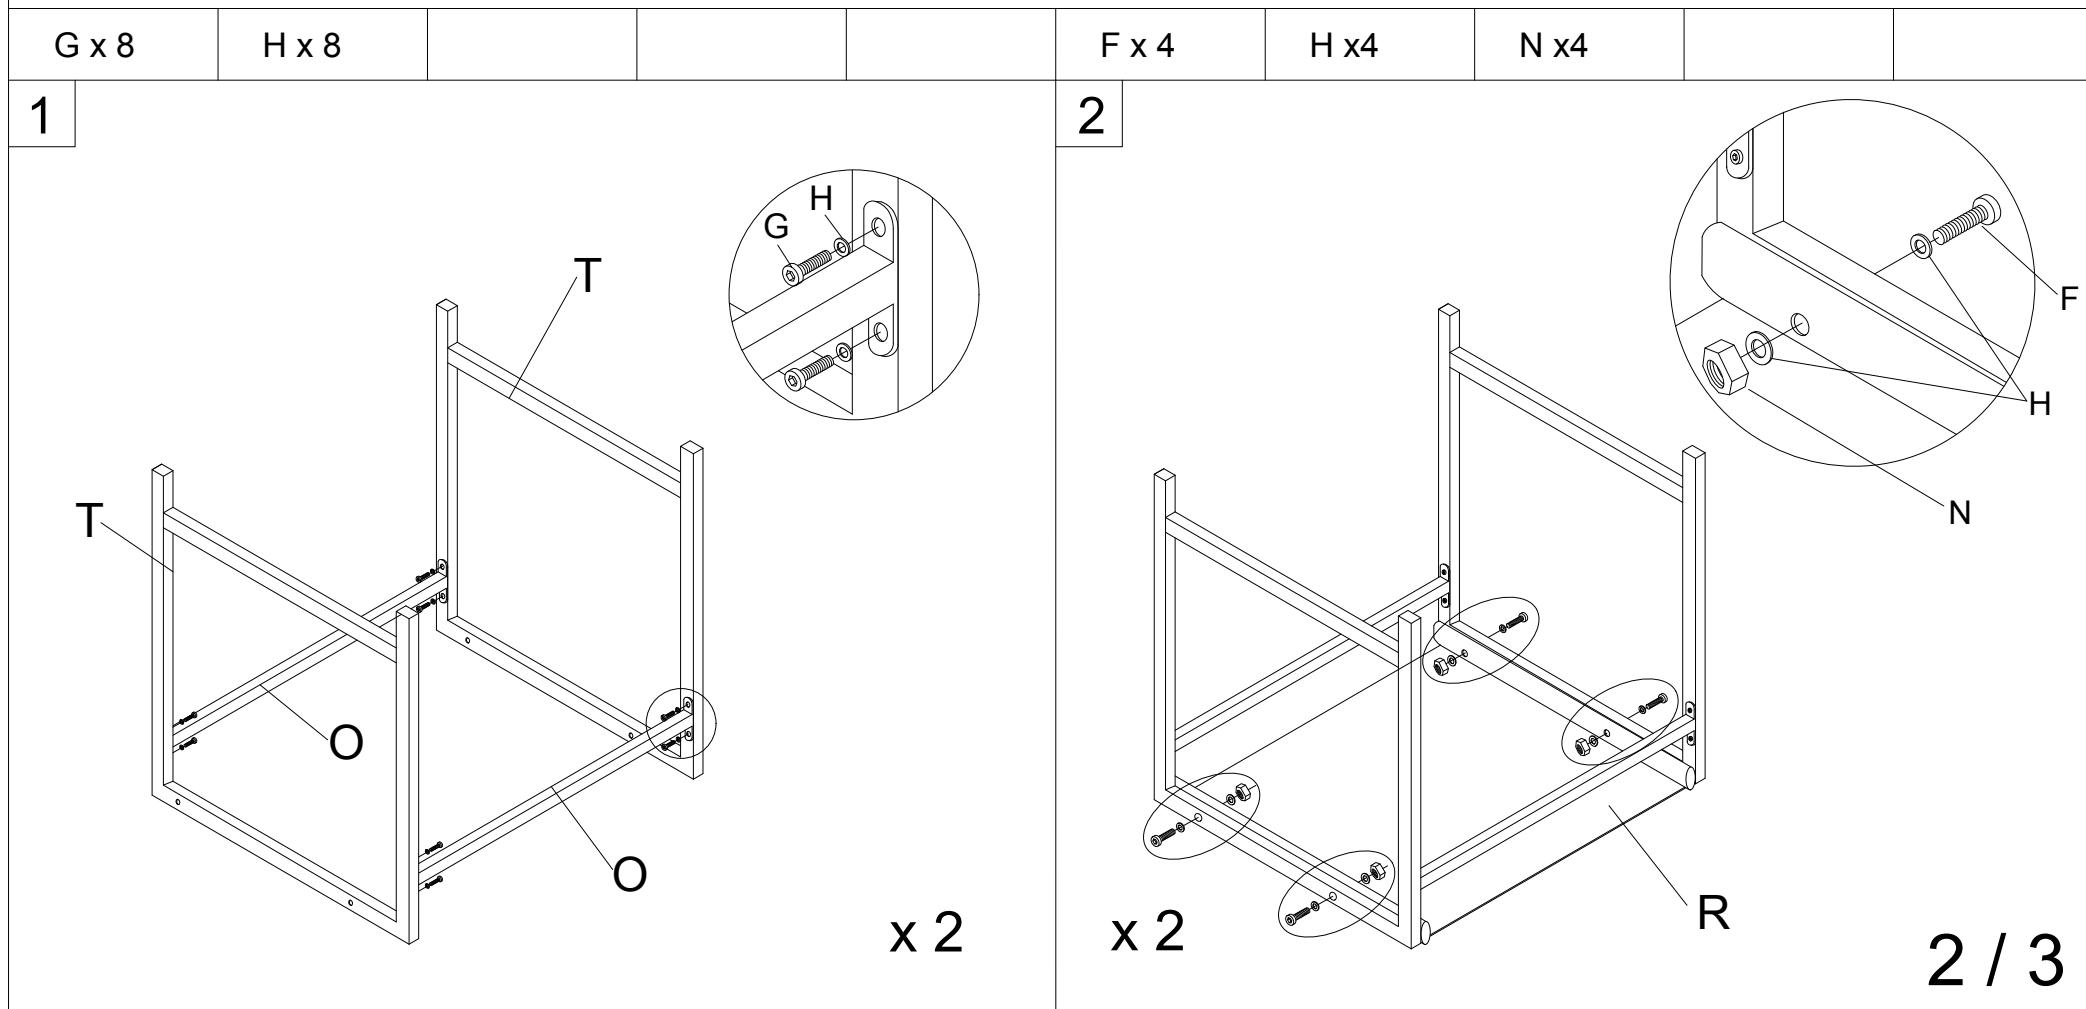

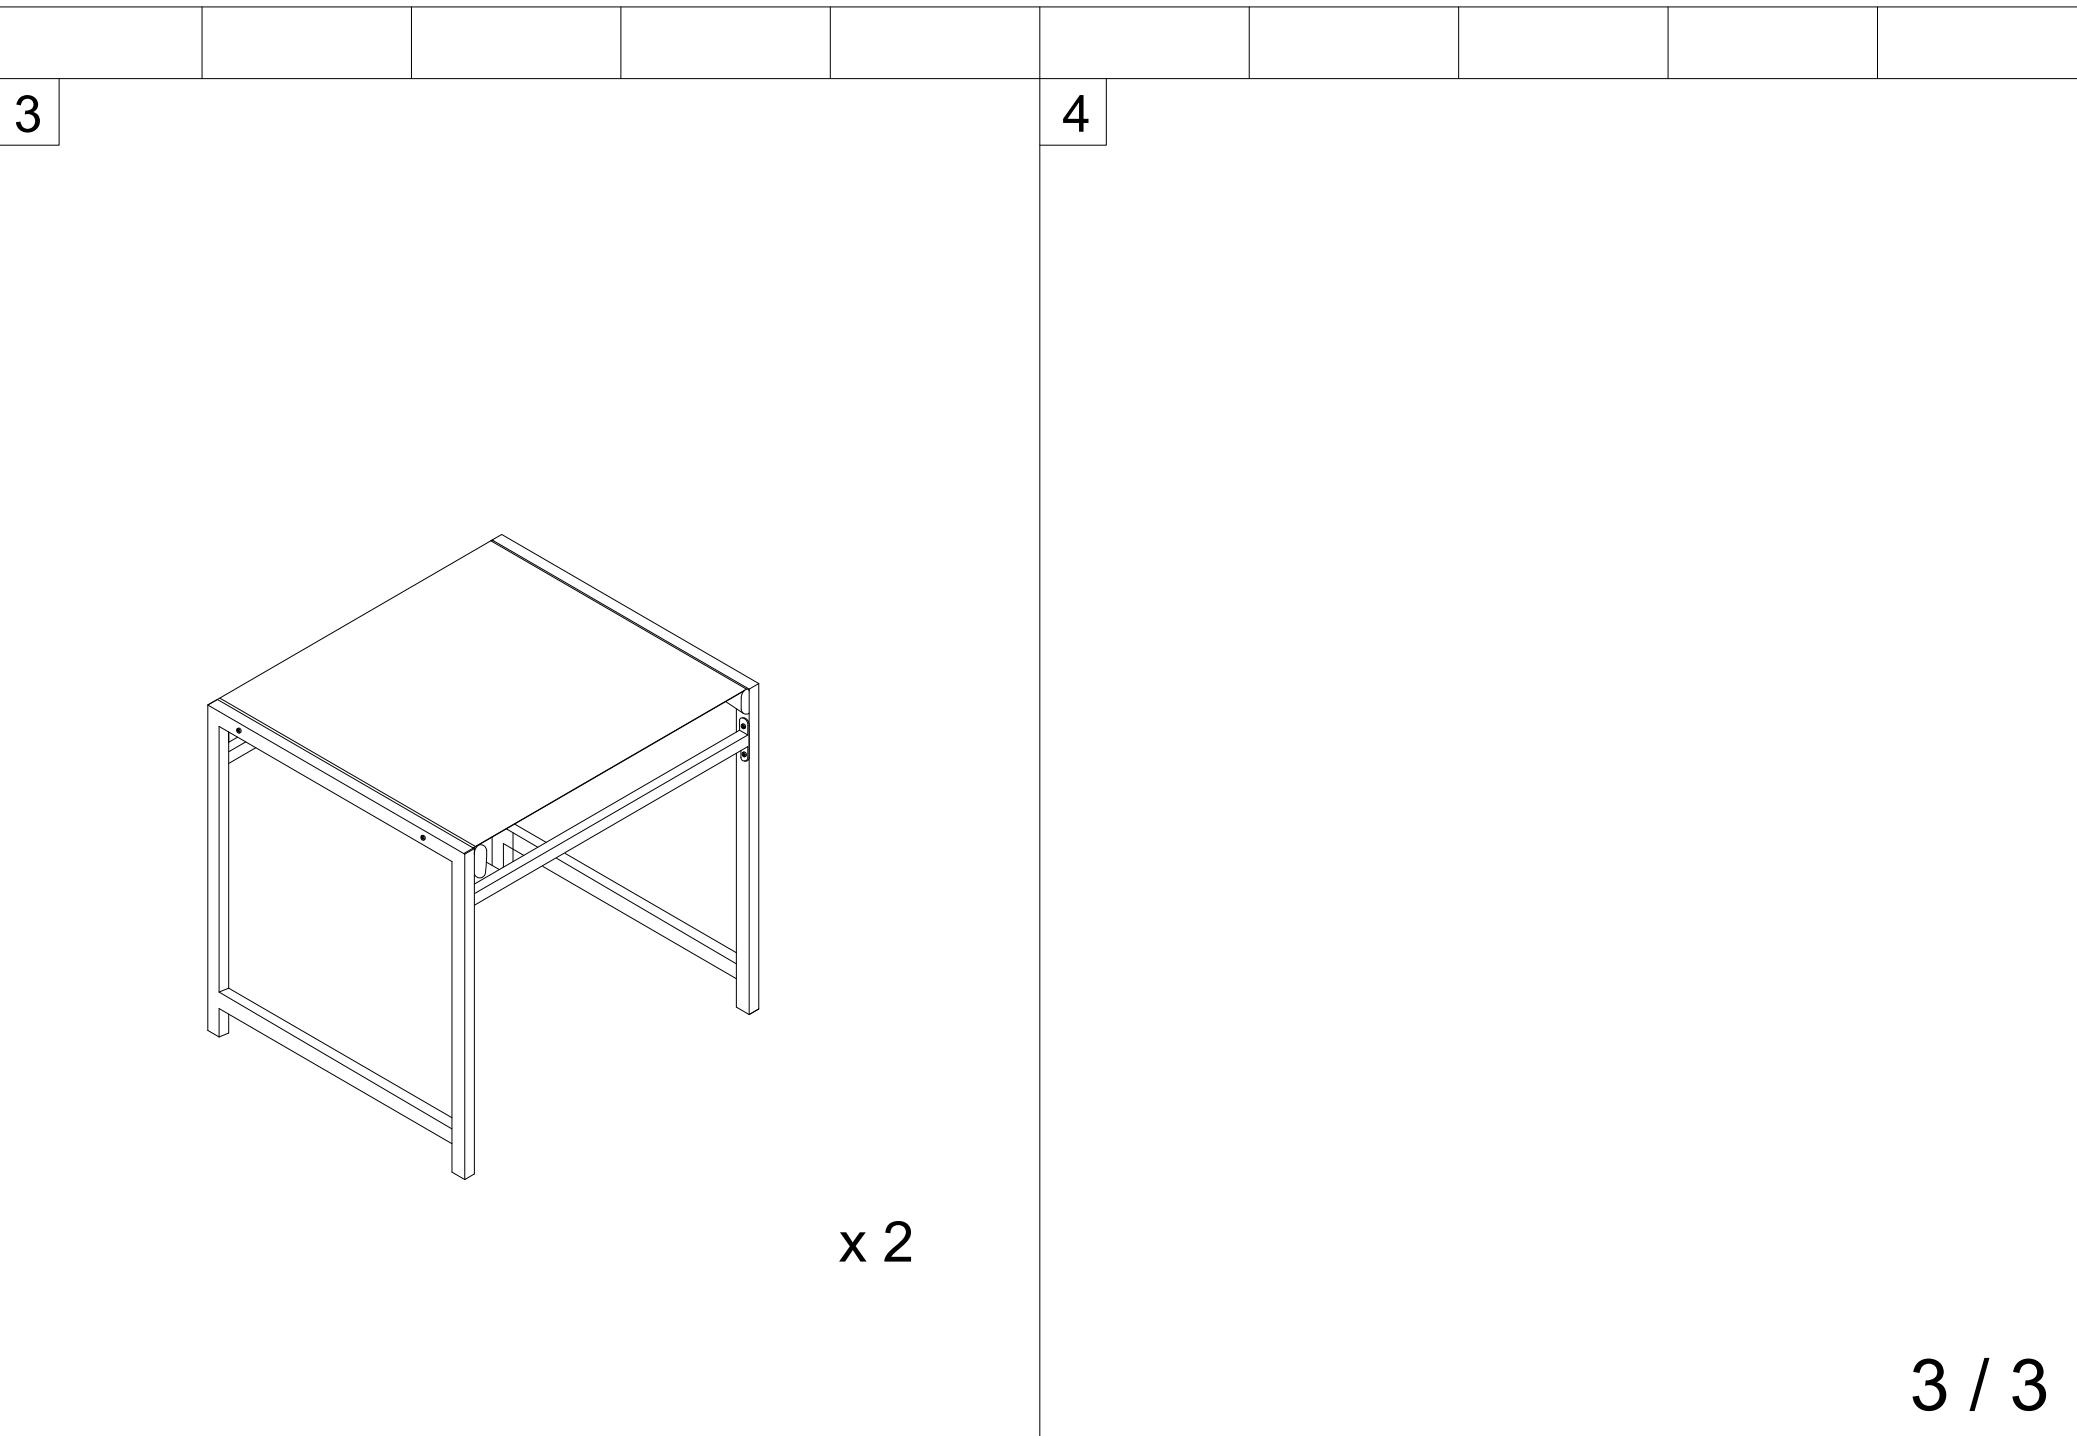

3 / 3