













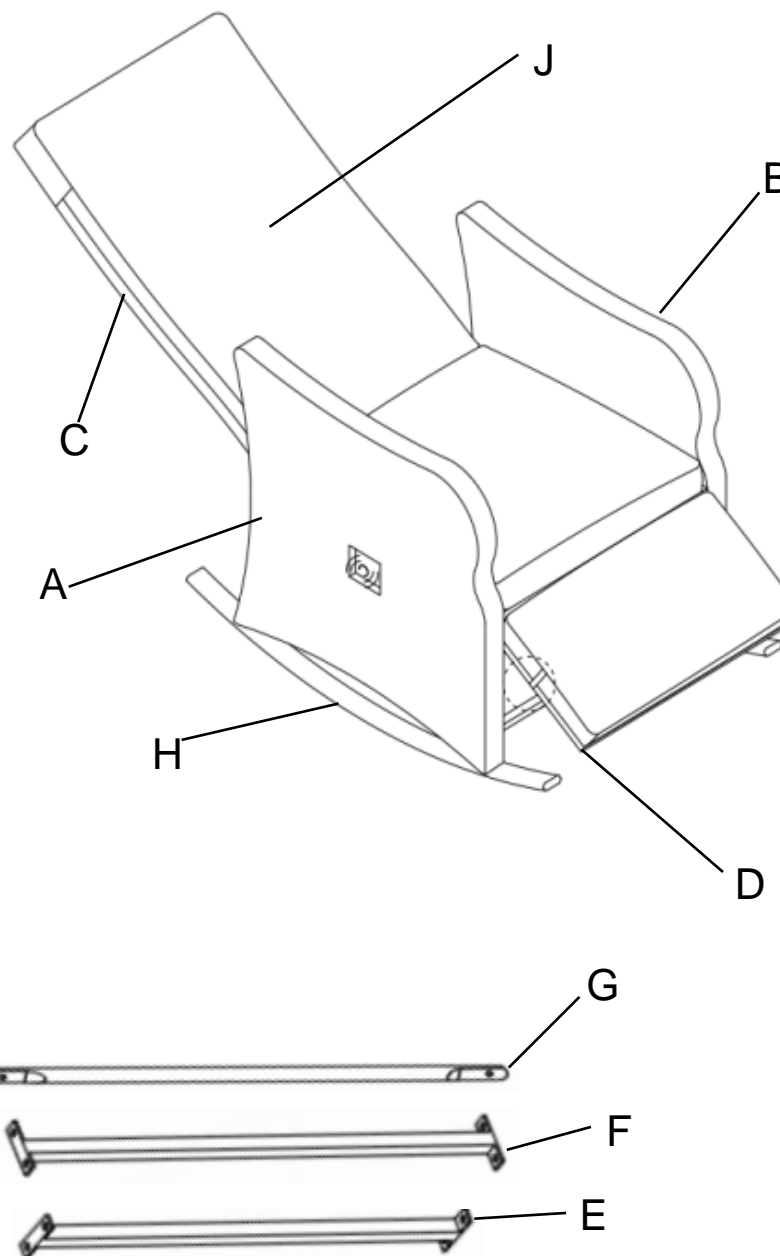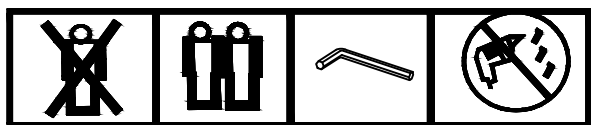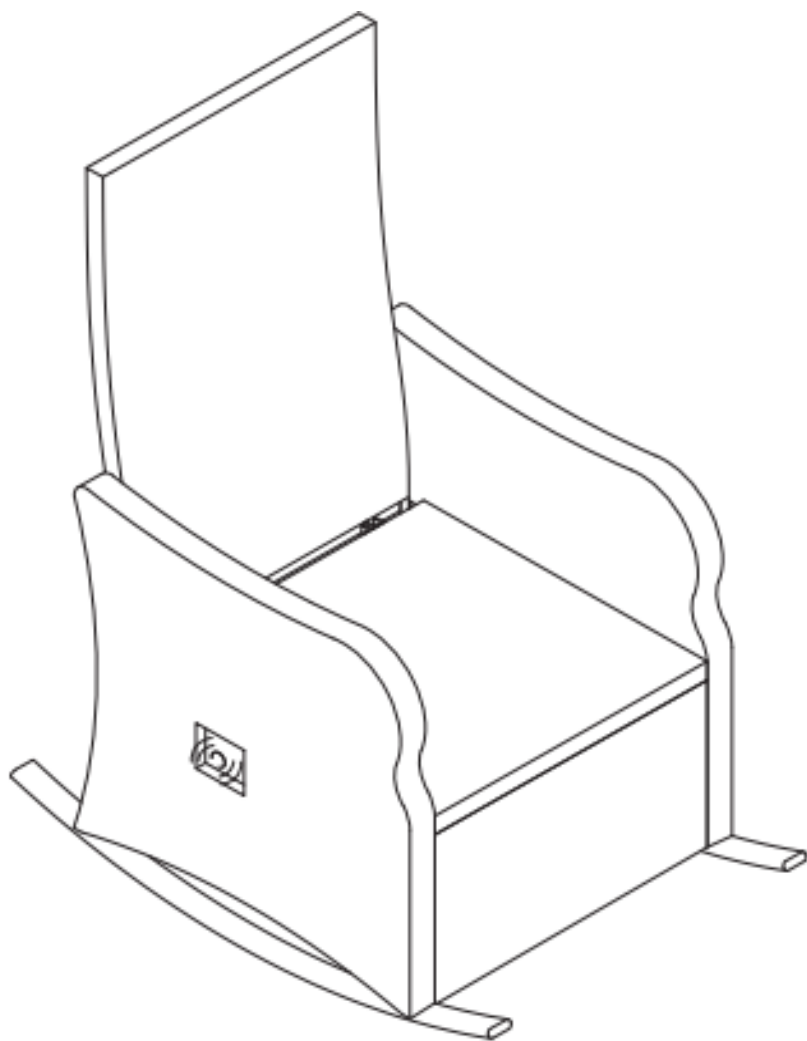

 **bonprix.**



941839



A*1
B*1
C*1
D*1
E*1
F*1
G*2
H*2
J*1


 M6*15 K x 12(+1)	 M6*45 L x 4	 M6*70 M x 2	 M8*30 O x 6(+1)	 M6 Q x 18(+2)	 M8 N x 12(+1)	 P x 6(+1)	 S x 1	 Z x 1
 M6 R x 1	 M8 X x 1							

Bitte ziehen Sie die Schrauben während der Montage noch nicht fest. Die Schrauben erst in ihrer Position fixieren und am Ende der Montage alle Schrauben festziehen.

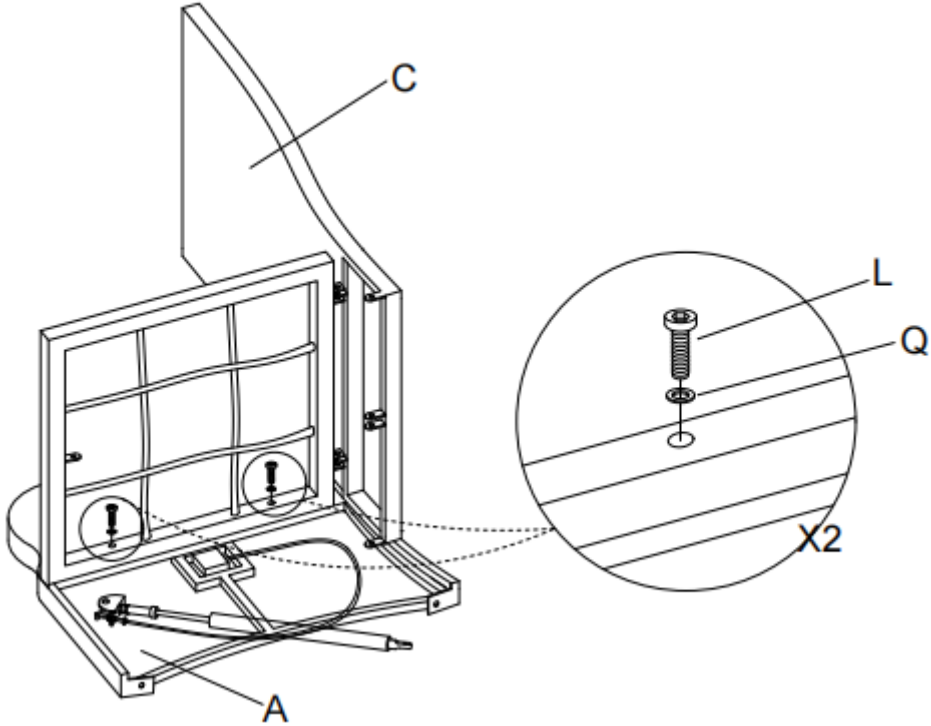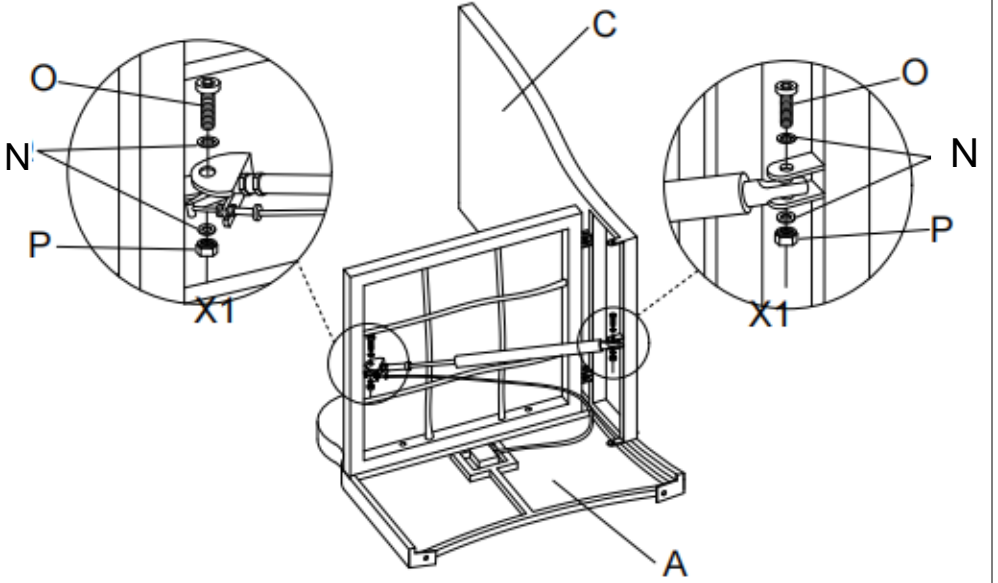
L x 2	Q x 2				O x 2	P x 2	N x 4		
<p>1</p> 					<p>2</p> 				
2 / 5									

O x 4	P x 4	Q x 1	M x 1	N x 8	L x 2	Q x 3	M x 1		
-------	-------	-------	-------	-------	-------	-------	-------	--	--

3

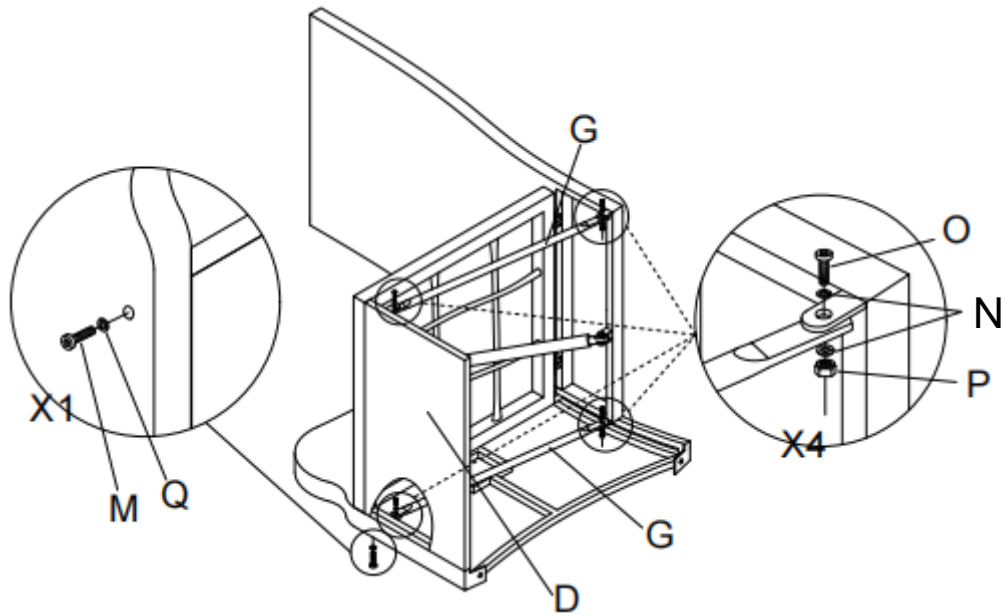


4

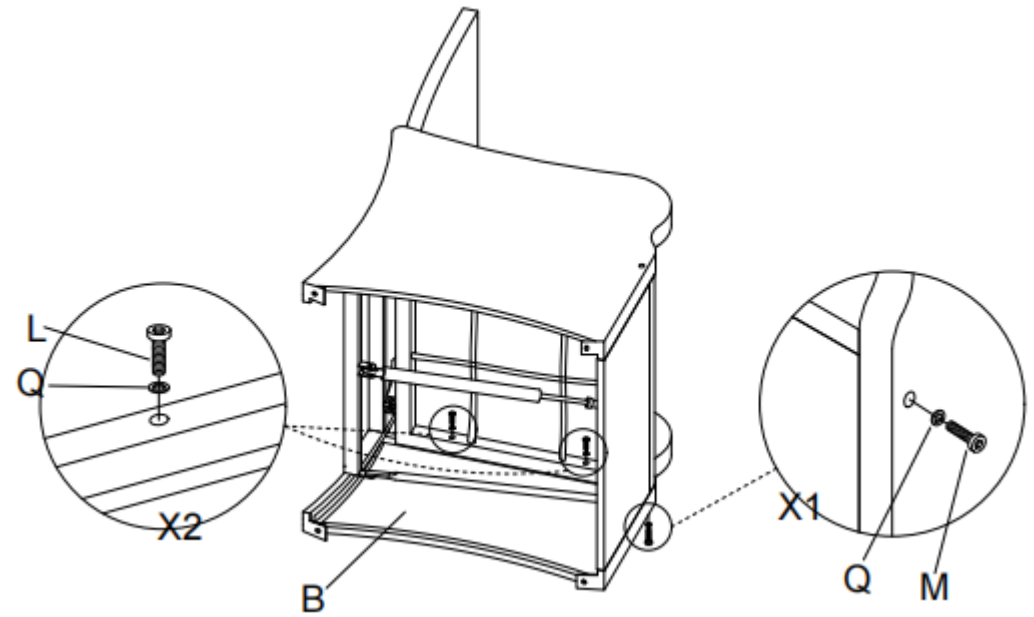

K x 8

Q x 8


5

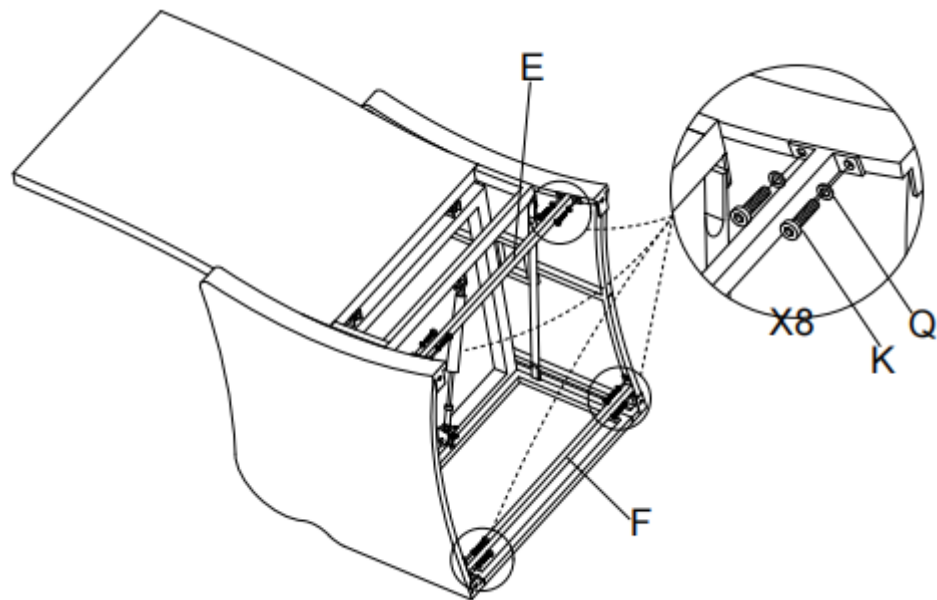


K x 4

Q x 4

6

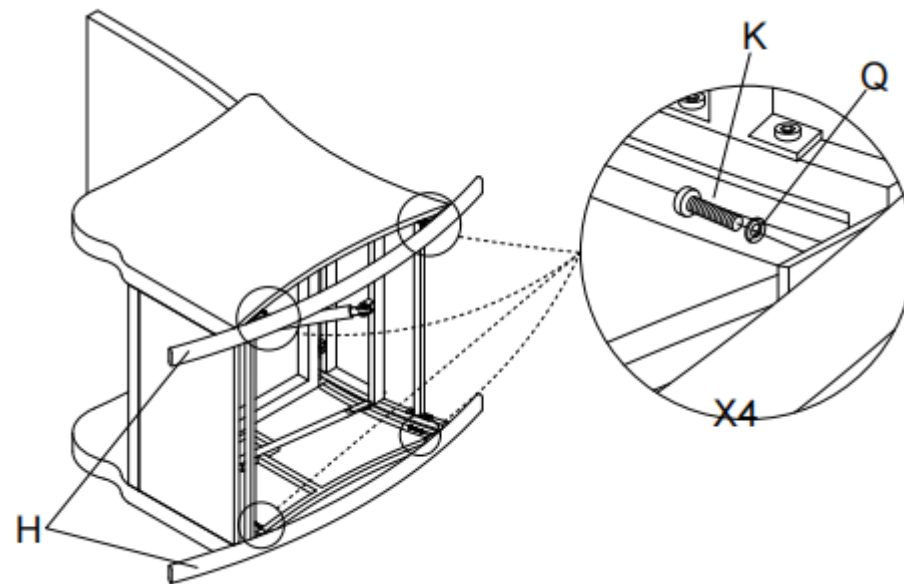

7

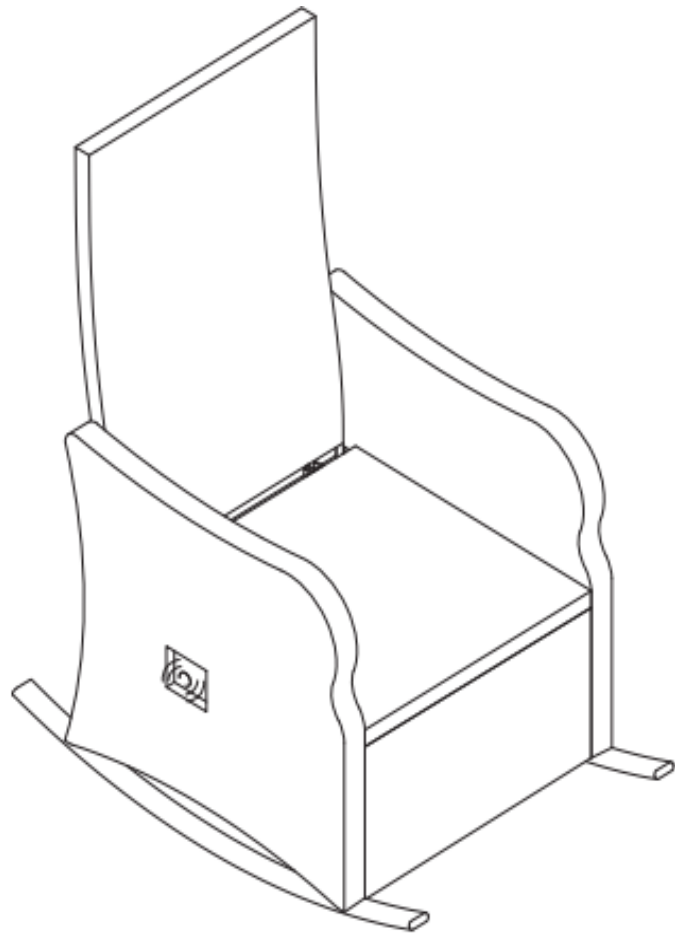

8

