







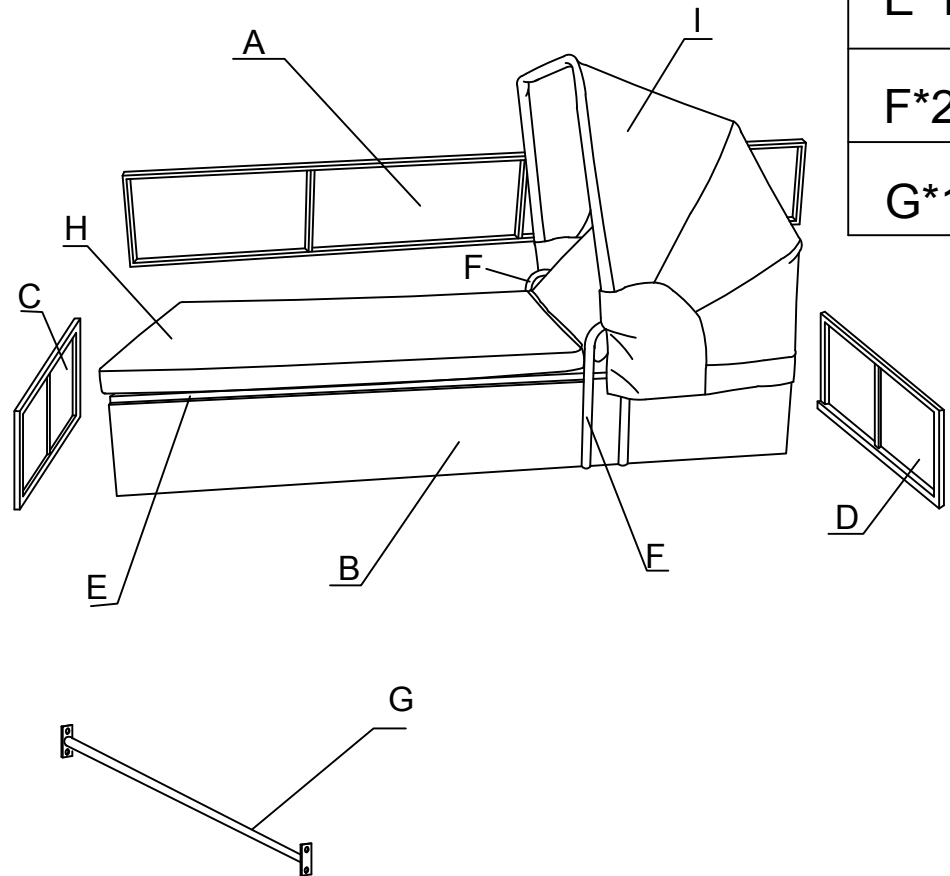


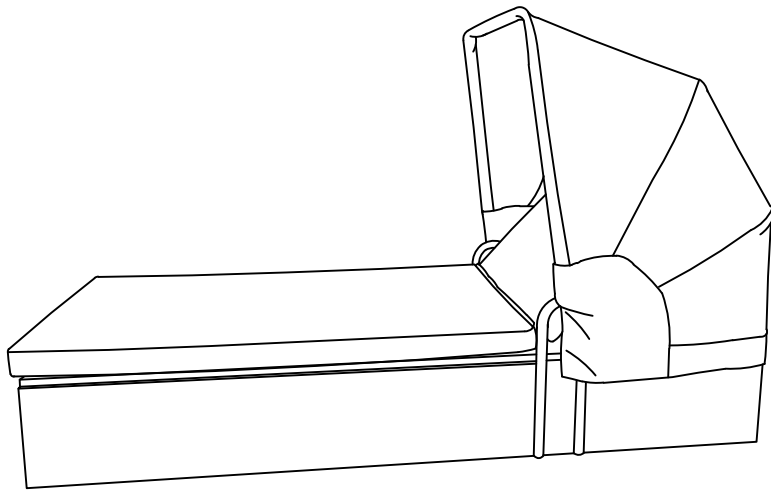



 bonprix.

947657

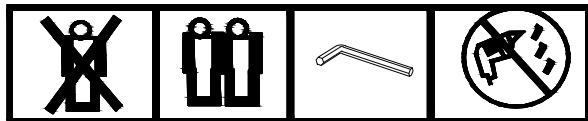



H*1	A*1
I*1	B*1
	C*1
	D*1
	E*1
	F*2
	G*1



									
M6*35 J x 24(+2)	M6*38 K x 8(+1)	M6*25 L x 1	M6*15 M x 4	N x 46(+2)	O x 9(+1)	P x 9(+1)	Q x 1	R x 1	X x 1

Bitte ziehen Sie die Schrauben während der Montage noch nicht fest. Die Schrauben erst in ihrer Position fixieren und am Ende der Montage alle Schrauben festziehen.


J x 8	N x 8				M x 4	N x 4			
-------	-------	--	--	--	-------	-------	--	--	--

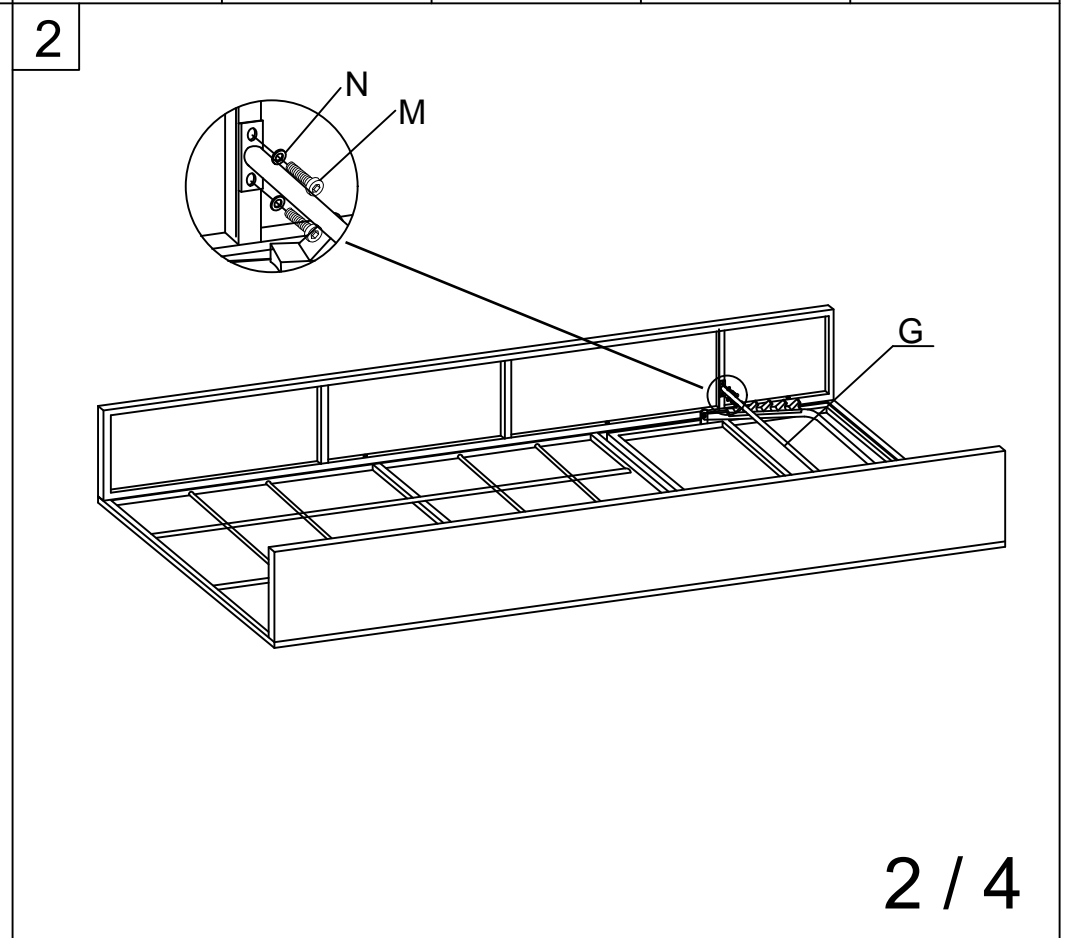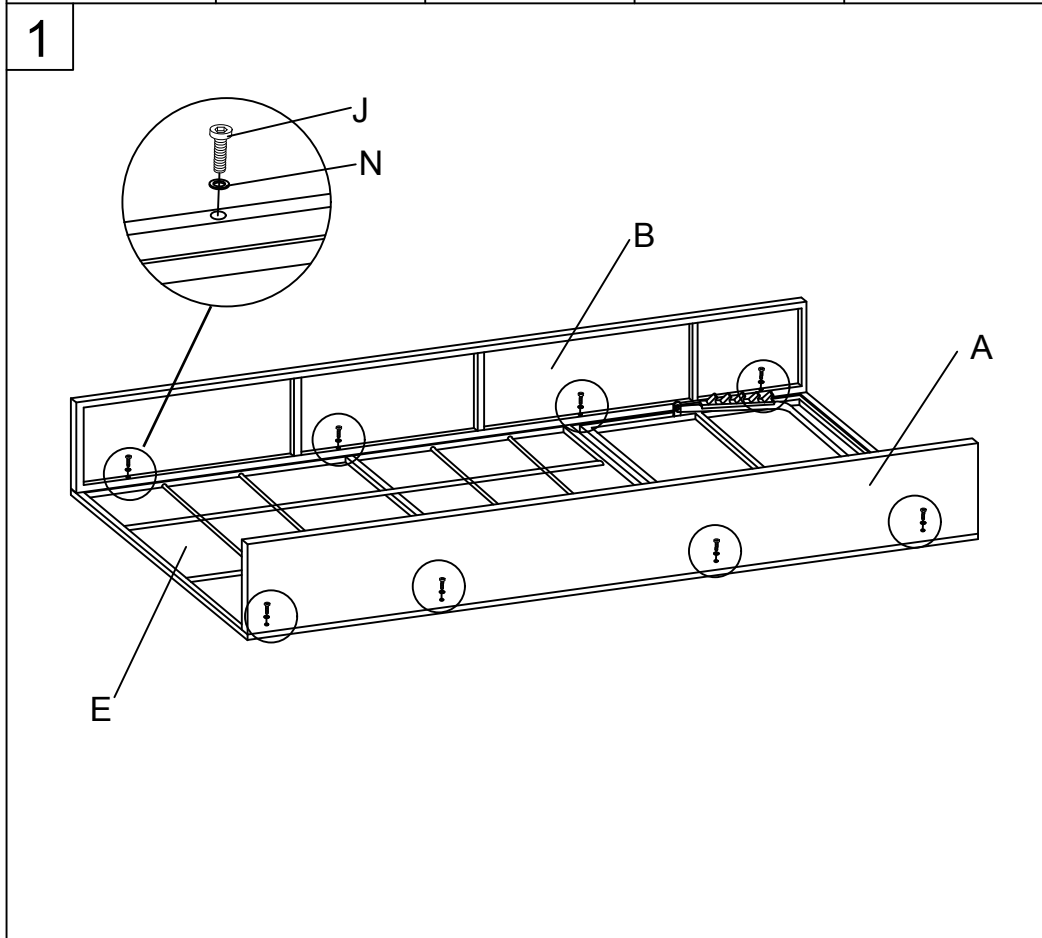

J x 8

N x 8


3

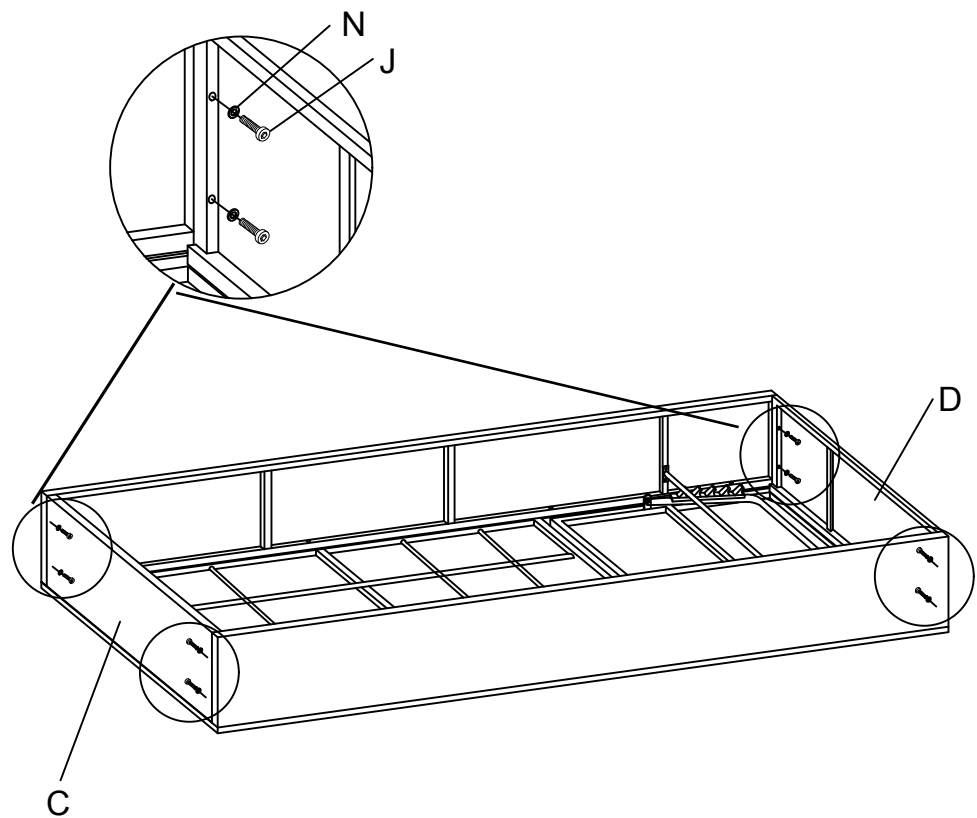

J x 8

N x 8

4

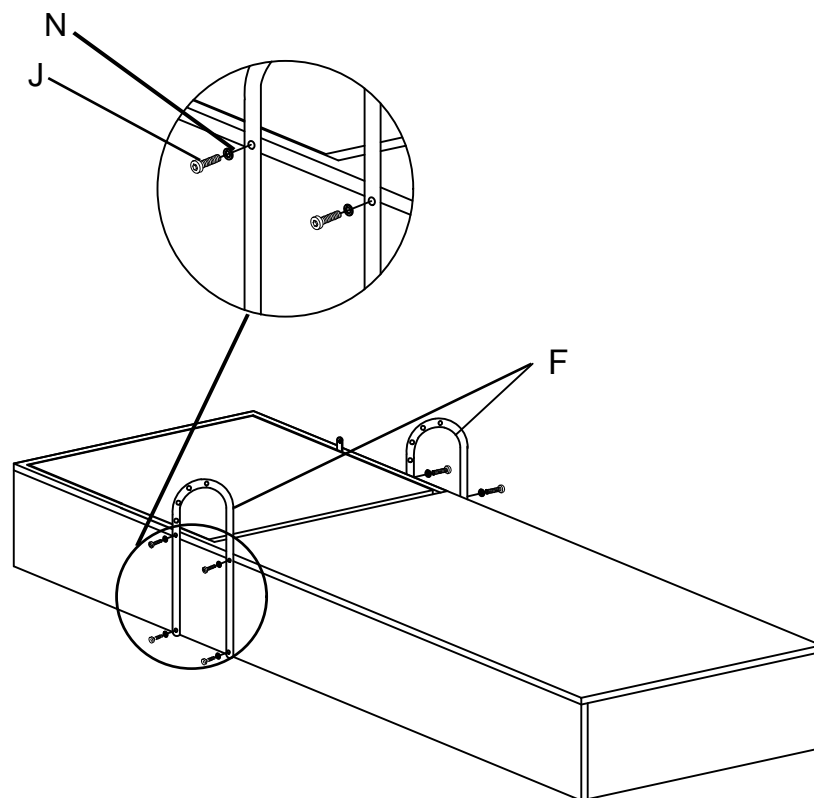

K x 8

N x 18

P x 9

O x 9

L x 1

4

