

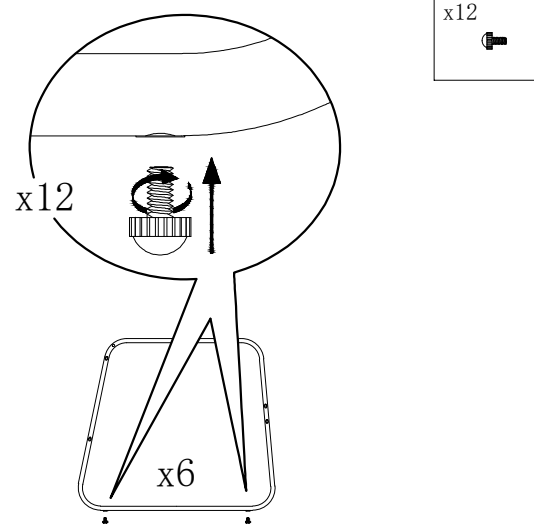
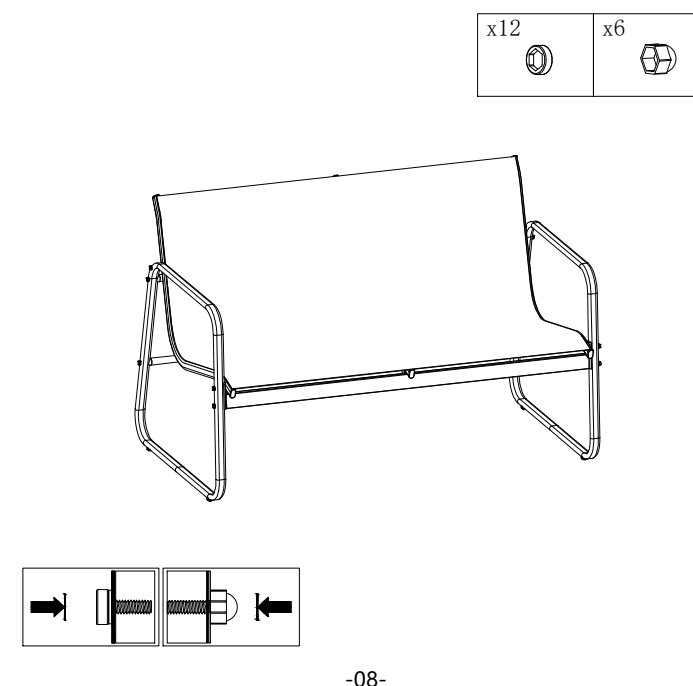
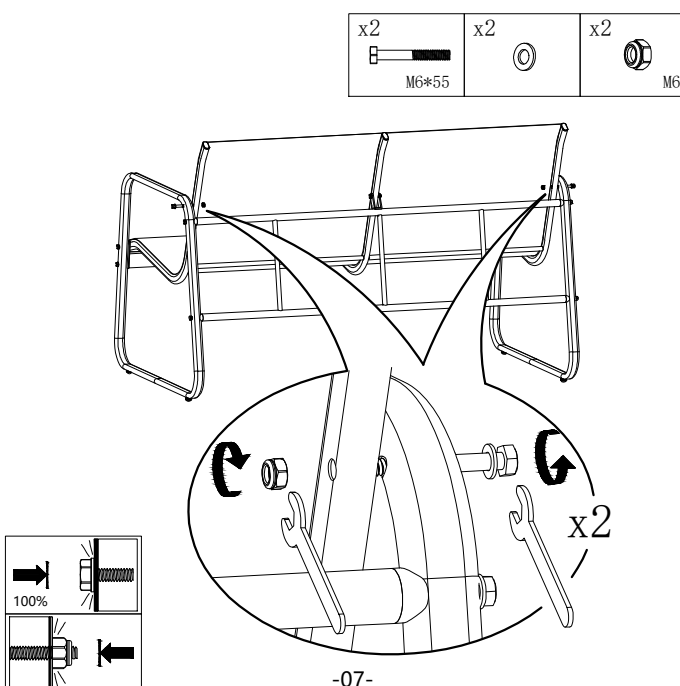
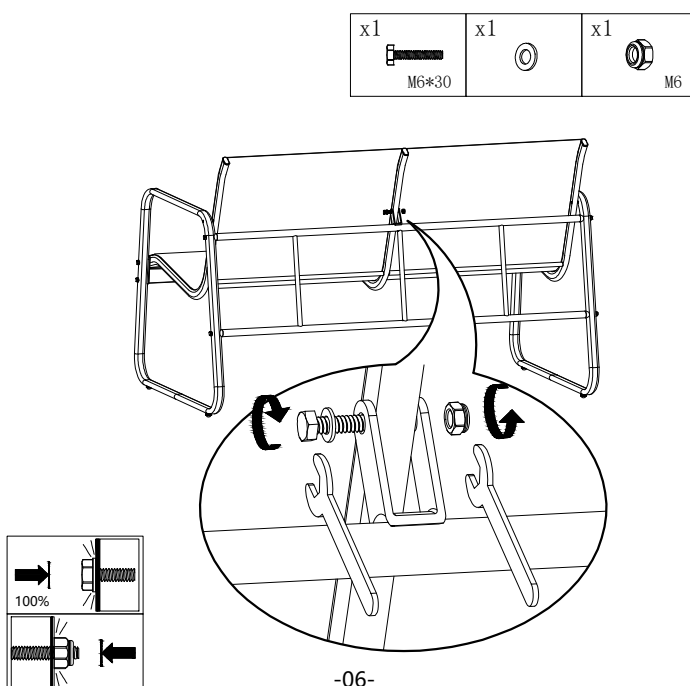
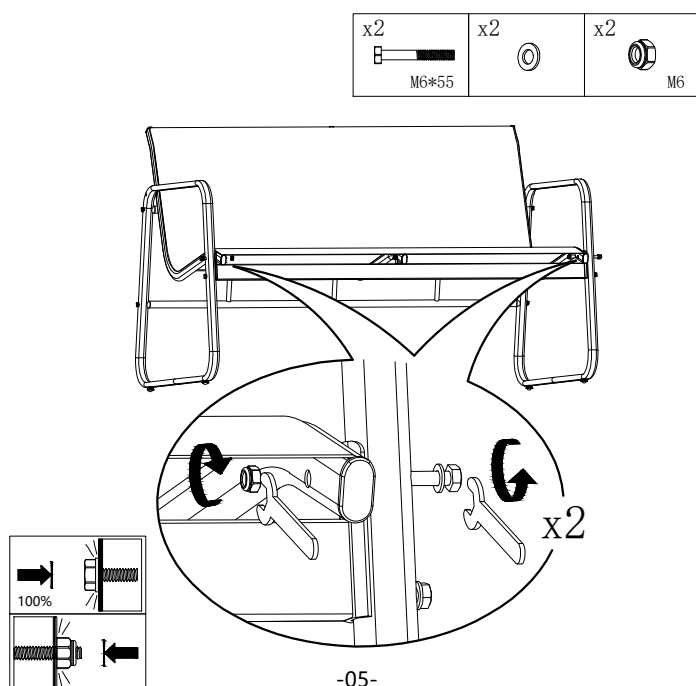
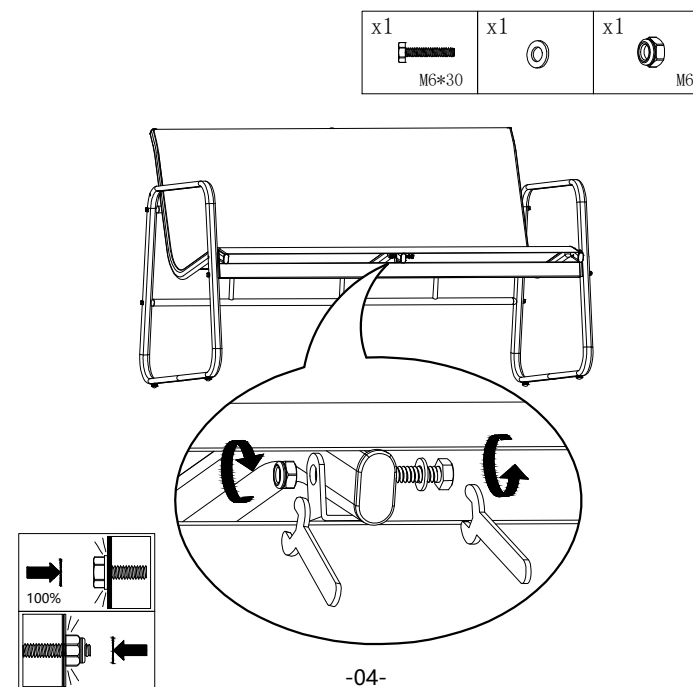
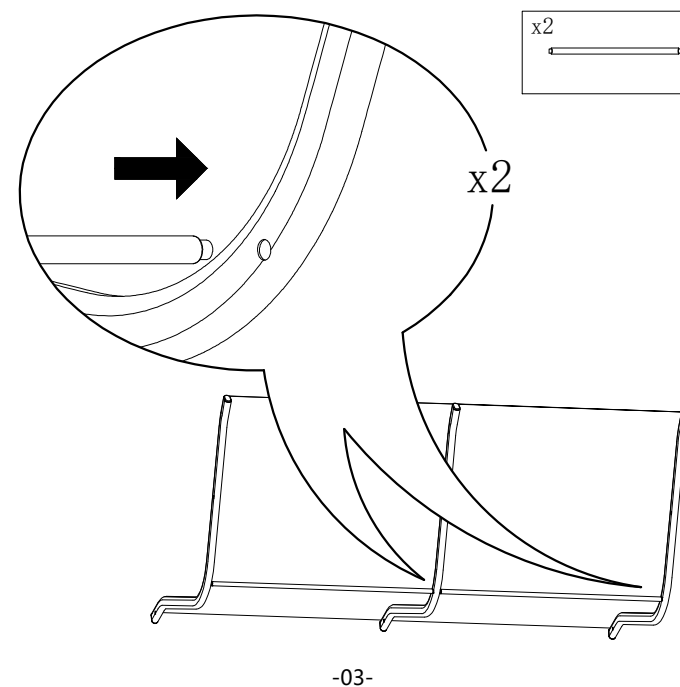
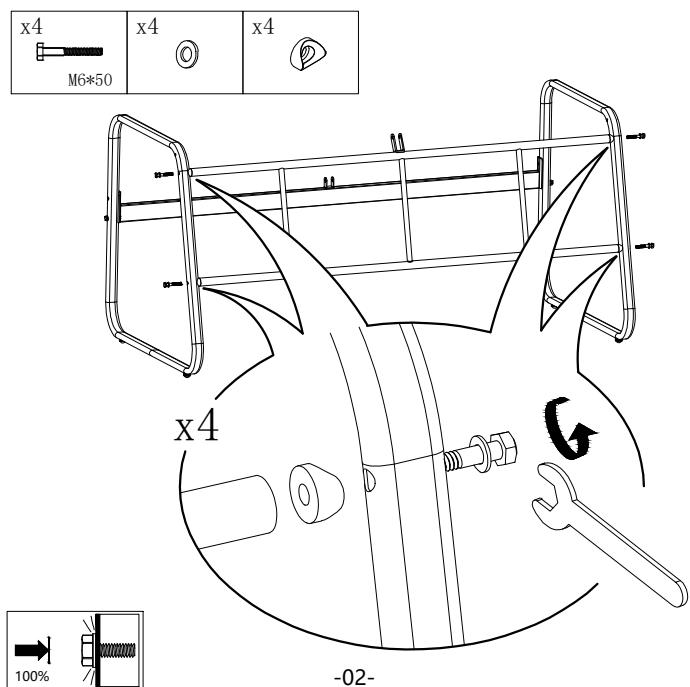
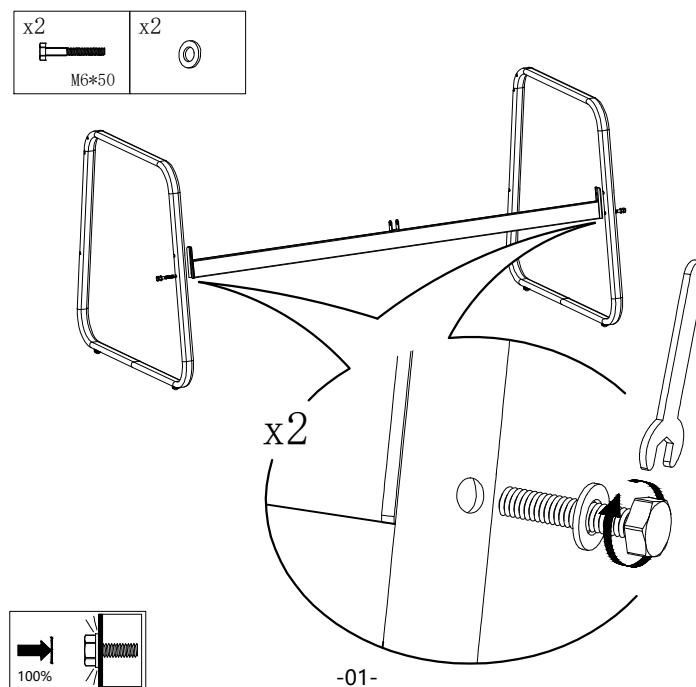



x6 	x1 	x1
x1 	x4 	

x2 	x2 	x4
x1 	x2 	x1
x4 	x2 	x18(+2)
x12(+1) 	x16(+2) 	x18(+2)
x12(+1) 	x32(+2) 	x4
x36(+2) 	x18(+2) 	x2


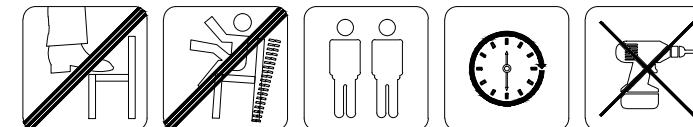


Bitte ziehen Sie die Schrauben während der Montage noch nicht fest. Die Schrauben erst in ihrer Position fixieren und am Ende der Montage alle Schrauben festziehen.

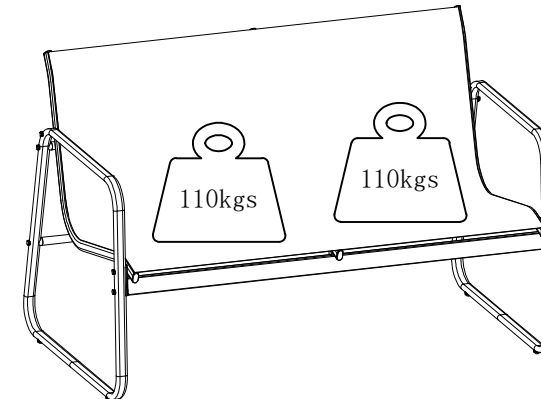


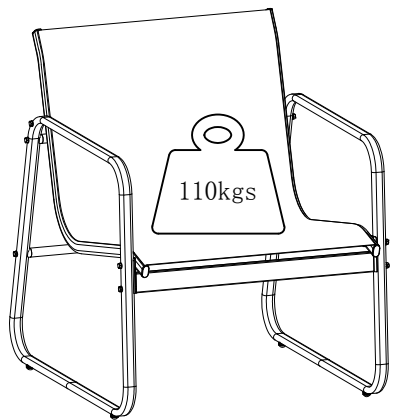


- x2 M6*50
- x2

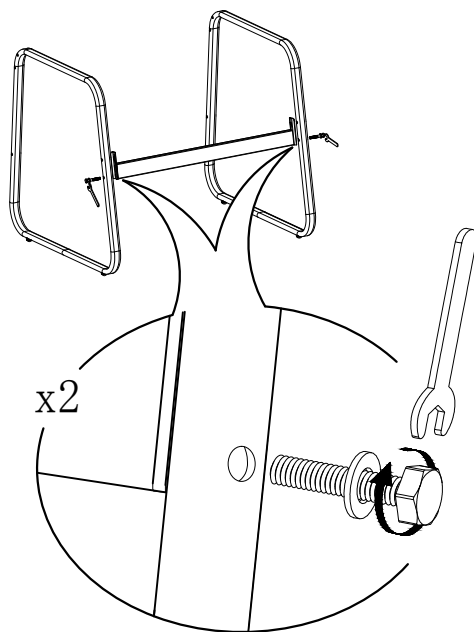


-01-

- x4 M6*50
- x4
- x4

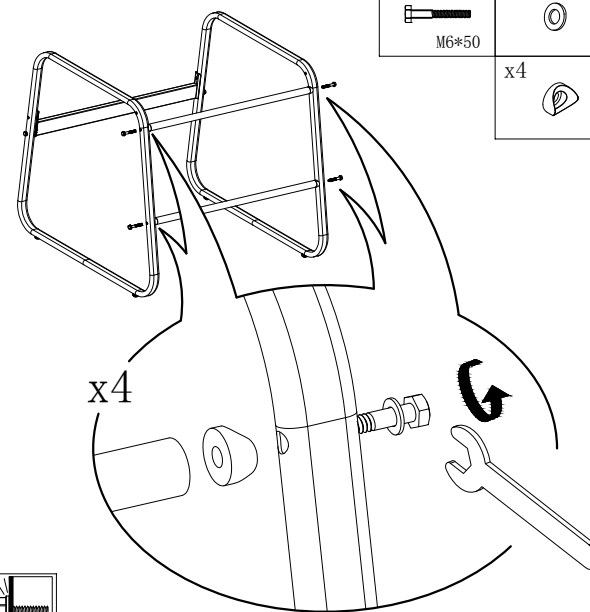


-02-



- x2

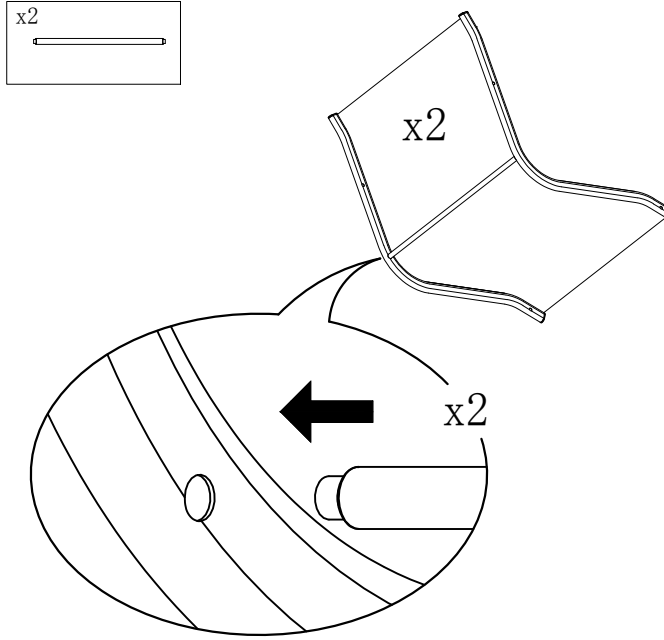

-03-


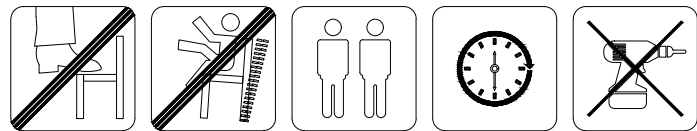


- x2 M6*55
- x2
- x2 M6

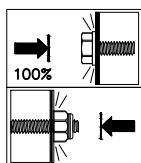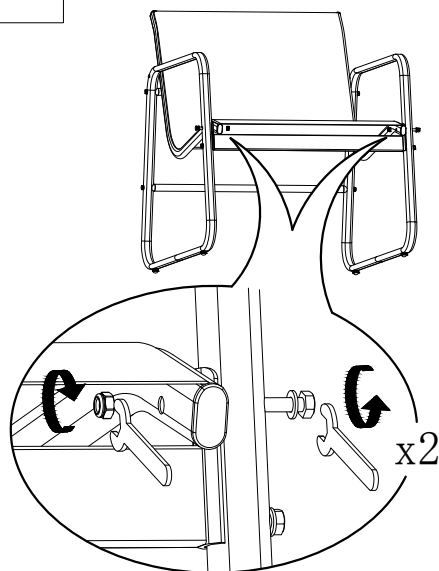



-04-

- x2 M6*55
- x2
- x2 M6


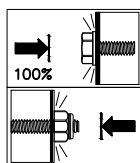
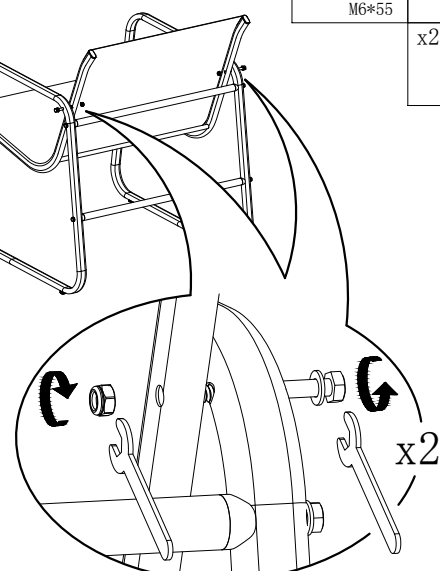


-05-

- x10
- x4

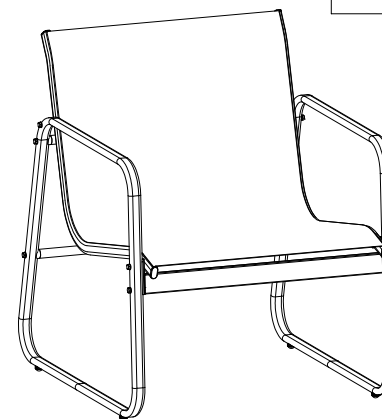

-06-

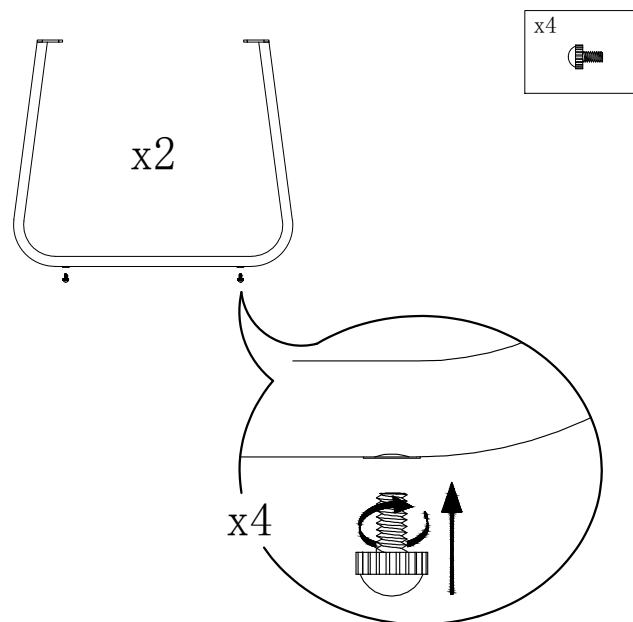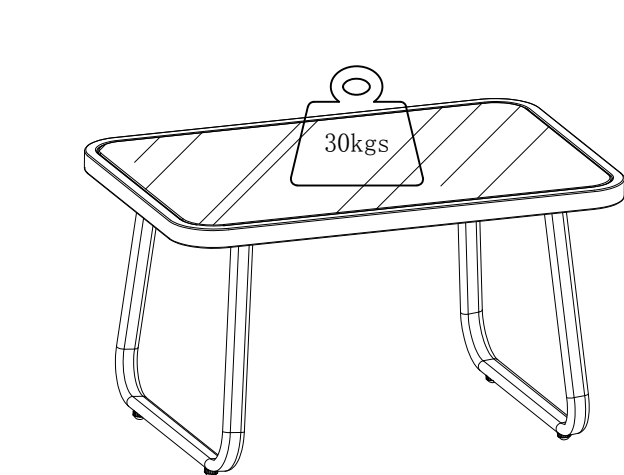
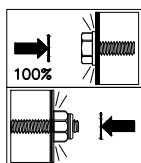


- x4

x4



-01-

- x4 M6*25
- x4
- x4 M6
- x4

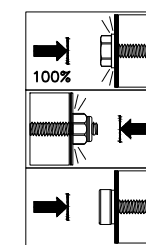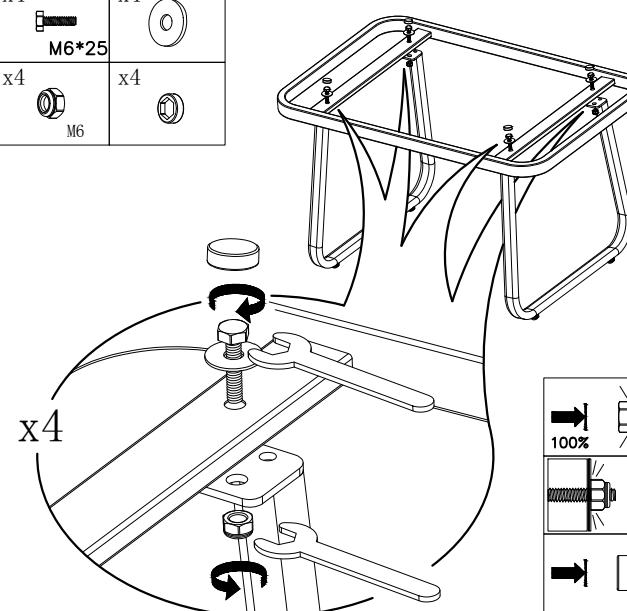

-02-

- x4

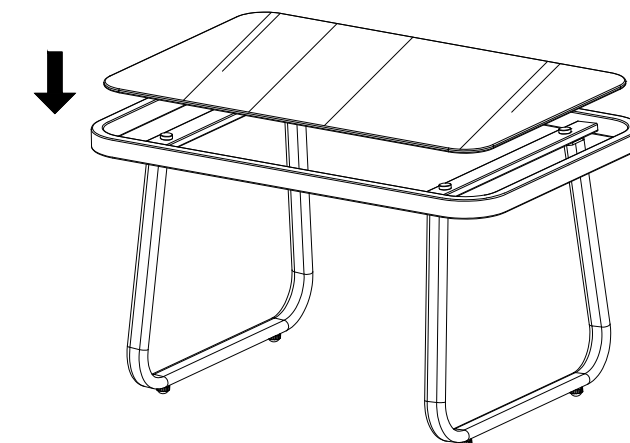

-03-

